



# OM 602RS


---

**6 DIGIT DATA DISPLAY**

RS 232/485

ASCII/MESSBUS/PROFIBUS

**DISPLAY 20 MM**

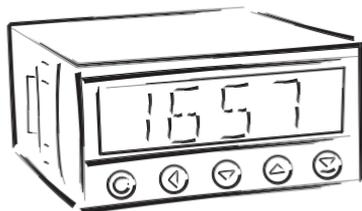



## SAFETY INSTRUCTIONS

Please, read the enclosed safety instructions carefully and observe them!  
These instruments should be safeguarded by isolated or common fuses (breakers)!  
For safety information the EN 61 010-1 + A2 standard must be observed.  
This instrument is not explosion-safe!

## TECHNICAL DATA

Measuring instruments of the OM 602 series conform to the European regulation 89/336/EWG.

The instruments are up to the following European standards:  
EN 55 022, class B  
EN 61000-4-2, -4, -5, -6, -8, -9, -10, -11

The instruments are applicable for unlimited use in agricultural and industrial areas.

## CONNECTION

Supply of energy from the main line has to be isolated from the measuring leads.



## ORBIT MERRET, spol. s r.o.

Vodňanská 675/30  
198 00 Prague 9  
Czech Republic

Tel: +420 - 281 040 200  
Fax: +420 - 281 040 299  
e-mail: orbit@merret.cz  
www.orbit.merret.cz



<b>1. CONTENTS</b> .....	<b>3</b>	<b>6.2 "PROFI" menu - CHANNEL</b>	
<b>2. INSTRUMENT DESCRIPTION</b> .....	<b>4</b>	6.2.1 Setting input parameters. ....	56
<b>3. INSTRUMENT CONNECTION</b> .....	<b>6</b>	6.2.2 Setting mathematic functions .....	59
Measuring ranges .....	6	6.2.3 Selection of evaluation of min/max. value ..	61
Instrument connection .....	6	<b>6.3 "PROFI" menu - OUTPUT</b>	
<b>4. INSTRUMENT SETTING</b> .....	<b>8</b>	6.3.1 Setting Limits .....	62
Symbols used in the instructions .....	10	6.3.2 Setting analog output .....	66
Setting the DP and the (-) sign .....	10	6.3.3 Selection of display projection .....	67
Control keys function .....	11	<b>6.4 "PROFI" menu - SERVICE</b>	
Setting/permitting items into "USER" menu .....	11	6.4.1 Selection of programming menu	
<b>5. SETTING "LIGHT" MENU</b> .....	<b>12</b>	„LIGHT"/„PROFI" .....	70
5.0 Description "LIGHT" menu .....	12	6.4.2 Restoration manufacture setting .....	71
Setting input .....	14	6.4.3 Selection of instrument menu	
Setting Limits .....	32	language version .....	71
Setting analog output .....	34	6.4.4 Setting new access password .....	72
Selection of programming menu „LIGHT"/„PROFI" ..	36	6.4.5 Instrument identification .....	72
Restoration of manufacture setting .....	36	<b>7. SETTING ITEMS INTO "USER" MENU</b> .....	<b>74</b>
Selection of instrument menu		<b>8. DATA PROTOKOL</b> .....	<b>76</b>
language version .....	36	<b>9. ERROR STATEMENTS</b> .....	<b>78</b>
Setting new access password .....	37	<b>10. TABLE OF SYMBOLS</b> .....	<b>79</b>
Instrument identification .....	37	<b>11. TECHNICAL DATA</b> .....	<b>80</b>
<b>6. SETTING "PROFI" MENU</b> .....	<b>38</b>	<b>12. INSTRUMENT DIMENSIONS AND INSTALATION</b> . . .	<b>82</b>
6.0 Description of "PROFI" menu .....	38	<b>13. CERTIFICATE OF GUARANTEE</b> .....	<b>83</b>
6.1 "PROFI" menu - INPUT			
6.1.1 Resetting internal values. ....	40		
6.1.2 Setting instruments.....	41		
6.1.5 External input function selection .....	51		
6.1.6 Optional accessory functions of the keys ..	52		

## 2. INSTRUMENT DESCRIPTION



### 2.1 DESCRIPTION

The OM 602RS type is a 4-digit panel display device for data from serial lines of RS 232 and RS 485 standard. Communication with ASCII or MessBus protocol.

All ASCII symbols may be displayed which are usable for 7-segment display.

#### PROGRAMMABLE PROJECTION

Setting:	input range - integer/float
Protocol:	ASCII/MESSBUS MODBUS - RTU* PROFIBUS DP
Projection:	-999...9999

#### LINEARIZATION

Linearization: by linear interpolation in 50 points (solely via OM Link)

#### DIGITAL FILTERS

Floating average:	from 2...30 measurements
Exponen.average:	from 2...100 measurements
Rounding:	setting the projection step for display

#### MATHEMATIC FUCTIONS

Min/max. value:	registration of min./max. value reached during measurement
Tare:	designed to reset display upon non-zero input signal
Peak value:	the display shows only max. or min. value
Mat. operations:	polynome, 1/x, logarithm, exponential, power, root, sin x

#### EXTERNAL CONTROL

Lock:	control keys blocking
Hold:	display/instrument blocking
Tare:	tare activation/resetting tare to zero
Resetting MM:	resetting min/max value

\*This protocol has separate instructions

## 2.2 OPERATION

The instrument is set and controlled by five control keys located on the front panel. All programmable settings of the instrument are performed in three adjusting modes:

<b>LIGHT</b>	<b>Simple programming menu</b> - contains solely items necessary for instrument setting and is protected by optional number code
<b>PROFI</b>	<b>Complete programming menu</b> - contains complete instrument menu and is protected by optional number code
<b>USER</b>	<b>User programming menu</b> - may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change) - acces without password

All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).

**OMLINK** Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.

The operation program is freely accessible ([www.orbit.merret.cz](http://www.orbit.merret.cz)) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

The program OMLINK in „Basic“ version will enable you to connect one instrument with the option of visualization and archiving in PC. The OM Link „Standard“ version has no limitation of the number of instruments connected.

## 2.3 OPTIONS

**Excitation** is suitable for supplying power to sensors and transmitters. It has a galvanic separation.

**Comparators** are assigned to monitor one, two, three or four limit values with relay output. The user may select limits regime: LIMIT/DOSING/FROM-TO. The limits have adjustable hysteresis within the full range of the display as well as selectable delay of the switch-on in the range of 0..99,9 s. Reaching the preset limits is signalled by LED and simultaneously by the switch-on of the relevant relay.

**Analog outputs** will find their place in applications where further evaluating or processing of measured data is required in external devices. We offer universal analog output with the option of selection of the type of output - voltage/current. The value of analog output corresponds with the displayed data and its type and range are selectable in Menu.


### 3. INSTRUMENT CONNECTION

The instrument supply leads should not be in proximity of the incoming low-potential signals.

Contactors, motors with larger input power should not be in proximity of the instrument.

The leads into the instrument input (measured quantity) should be in sufficient distance from all power leads and appliances. Provided this cannot be secured it is necessary to use shielded leads with connection to ground (bracket E).

The instruments are tested in compliance with standards for use in industrial area, yet we recommend to abide by the above mentioned principles.

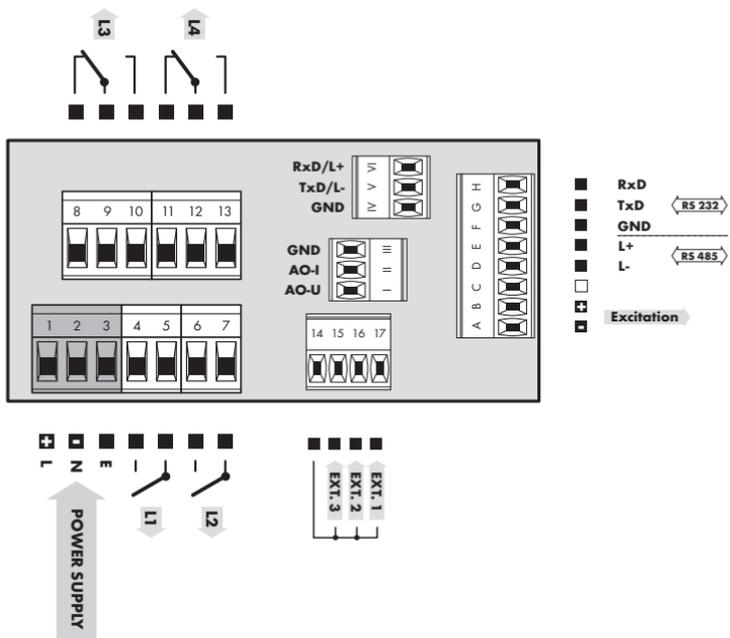

#### EXTERNAL INPUTS

	DESCRIPTION	CONTROL
EXT.	According to setting in Menu (see Menu > EXT. IN., page 46)	upon contact, bracket [No. 14 and 15/16/17]





## SETTING **PROFI**

For expert users

Complete instrument menu

Access is password protected

Possibility to arrange items of the **USER MENU**

Tree menu structure

## SETTING **LIGHT**

For trained users

Only items necessary for instrument setting

Access is password protected

Possibility to arrange items of the **USER MENU**

Linear menu structure

## SETTING **USER**

For user operation

Menu items are set by the user (Profi/Light) as per request

Access is not password protected

Optional menu structure either tree (PROFI) or linear (LIGHT)

## 4.1 SETTING

The instrument is set and controlled by five control keys located on the front panel. All programmable settings of the instrument are performed in three adjusting modes:


- LIGHT**      **Simple programming menu**  
 - contains solely items necessary for instrument setting and is protected by optional number code
- PROFI**      **Complete programming menu**  
 - contains complete instrument menu and is protected by optional number code
- USER**      **User programming menu**  
 - may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change)  
 - acces without password

All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).

Complete instrument operation and setting may be performed via QM Link communication interface, which is a standard equipment of all instruments.


The operation program is freely accessible ([www.orbit.merret.cz](http://www.orbit.merret.cz)) and the only requirement is the purchase of QML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the QML cable).

## User data protocol

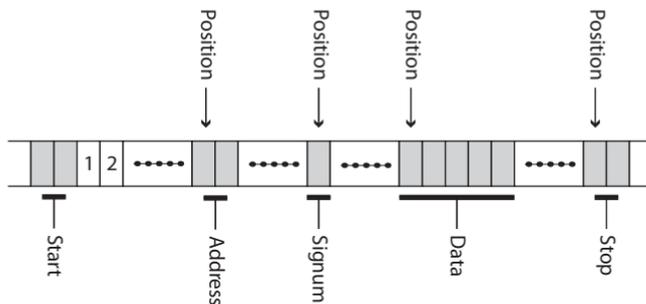

## 4. INSTRUMENT SETTING

Setting and controlling the instrument is performed by means of 5 control keys located on the front panel. With the aid of these keys it is possible to browse through the operation menu and to select and set required values.

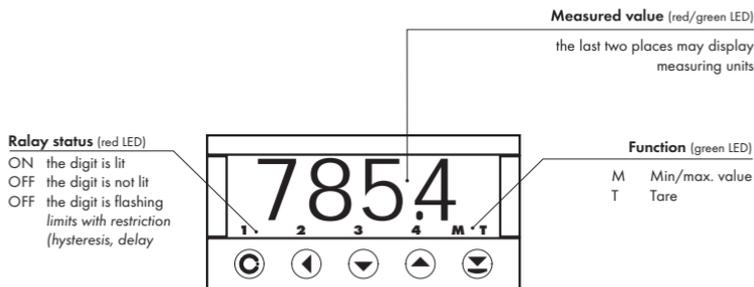

### Symbols used in the instructions



values preset from manufacture



symbol indicates a flashing light (symbol)



inverted triangle indicates the item that can be placed in USER menu



broken line indicates a dynamic item, i.e. it is displayed only in particular selection/version



after pressing the key the set value will not be stored



after pressing the key the set value will be stored



**30** continues on page 30

### Setting the decimal point and the minus sign

#### DECIMAL POINT

Its selection in the menu, upon modification of the number to be adjusted it is performed by the control key with transition beyond the highest decade, when the decimal point starts flashing. Positioning is performed by

#### THE MINUS SIGN

Setting the minus sign is performed by the key on higher decade. When editing the item subtraction must be made from the current number (e.g.: 013 > , on class 100 > -87)

## Control keys functions

KEY	MEASUREMENT	MENU	SETTING NUMBERS/SELECTION
	access into USER menu	exit menu	quit editing
	programmable key function	back to previous level	move to higher decade
	programmable key function	move to previous item	move down
	programmable key function	move to next item	move up
	programmable key function	confirm selection	confirm setting/selection
			numeric value is set to zero
	access into LIGHT/PROFI menu		
	direct access into PROFI menu		
		configuration of an item for "USER" menu	
		determine the sequence of items in "USER - LIGHT" menu	

## Setting items into „USER“ menu

- in **LIGHT** or **PROFI** menu
- no items permitted in **USER** menu from manufacture
- on items marked by inverted triangle

## USER

legend is flashing - current setting is displayed



NO

item will not be displayed in USER menu

YES

item will be displayed in USER menu with the option of setting

SHOW

item will be solely displayed in USER menu



# SETTING LIGHT

For trainNOd users

Only items NOecessary for instrument setting

Access is password protected

Possibility to arrange items of the **USER MENU**

LiNOar menu structure

### Preset from manufacture

Password	'0'
Menu	LIGHT
USER menu	off
Setting the items	<b>DEF</b>



Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

Access password

1428 PASS 0

Baud rate: BAUD 96 Instrument address: ADR 0 Data protocol: PROT. ASQ Command: COMM 0

Setting - Integer: MI N0 0 MI N1 0 MI N2 0 MAX3 0

Setting - Integer: MAX0 0 MAX1 0 MAX2 0 MAX3 100

Setting - Float: MI NF 0.0 MAXF 1000

Setting - 1-initial sequence: STA1 2 Setting - 2-initial sequence: STA2 0 Setting - Address position: ADP0 0 Setting - Address symbol: Adr1 48

Setting - 2-address symbol: Adr2 49 Setting - Signum position: SI PO 0 Signum supression: PSUP. YES Setting - Data position: DAP0 0

Setting - closing sequence: ST01 3 Setting - Request (REQ1..REQ8): REQ1 0 Setting - Communi. failure: MO.TD. DASH Setting - Timeout: TI MO. 10

Selection input range - min: MI NA 0.0 Selection input range - max: MAXA 1000 Projection: FORA 000.0

Option - comparator


Option - Analog output


Basic color: CO.0 GRE. First color's limit: D.L1 3333 Color after fir st limit: CO.1 RED Second color's limit: D.L2 6667

Color after second limit: CO.2 ORA. Menu type: MENU U GH. Return to manufacture setting: RESE FIRM. Language selection: LANG ENGL.

N0w password: PALJ 0 Identification: IDEN. YES Instrument type: OM602RS SW number: 65-001 1428 Return to measuring mode

## 5. SETTING LIGHT

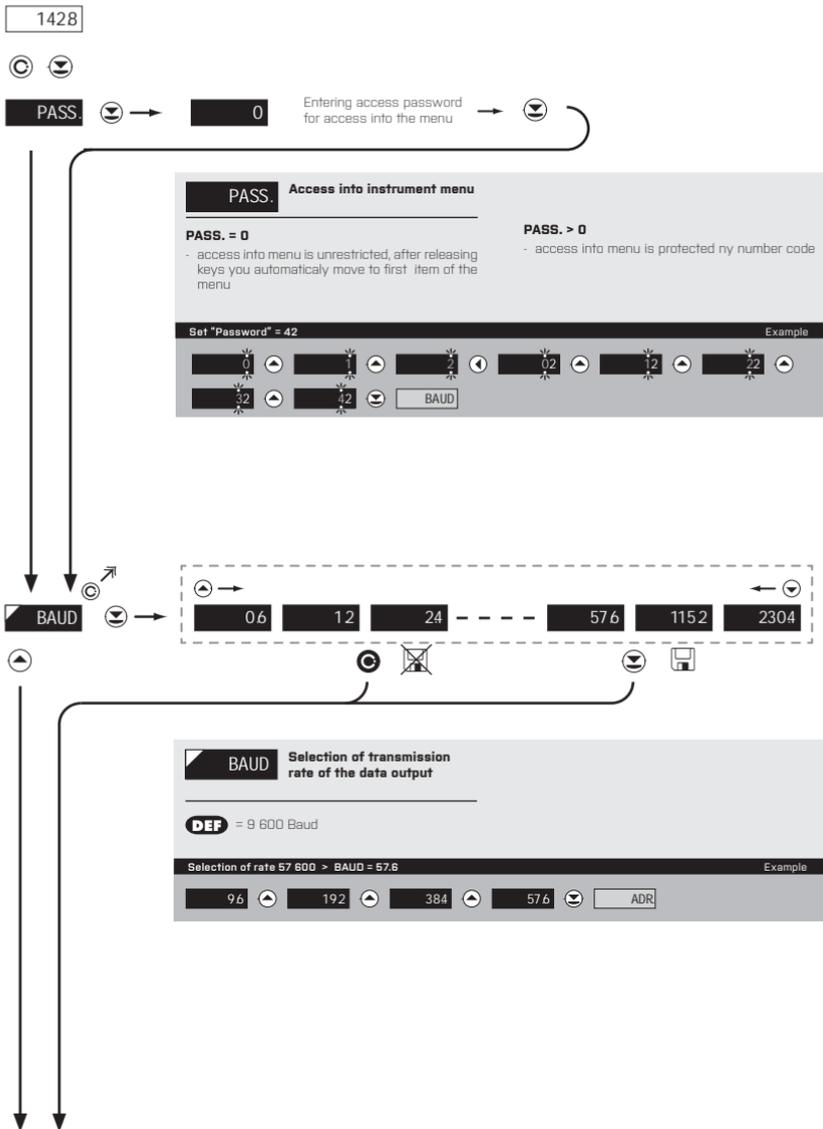

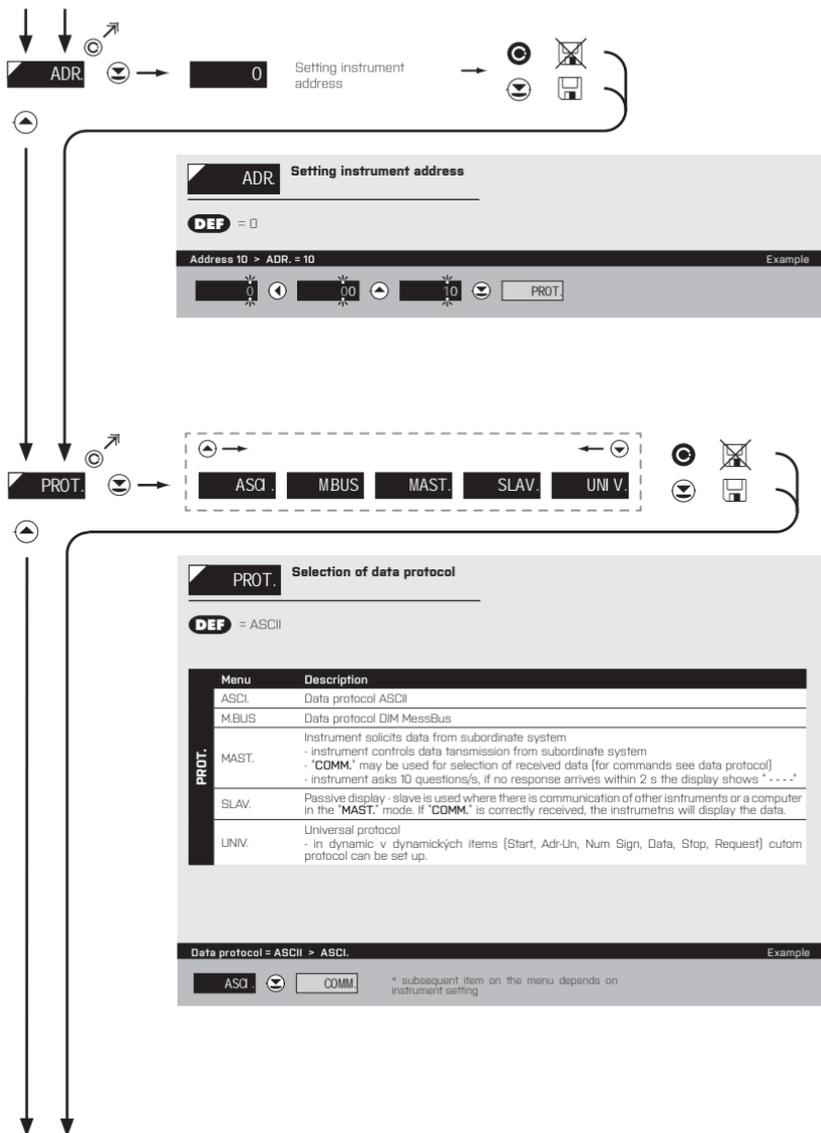

**ADR** Setting instrument address

**DEF** = 0

Address 10 > ADR. = 10 Example

0 00 10 PROT

PROT.

ASCII MBUS MAST SLAV UNIV

**PROT.** Selection of data protocol

**DEF** = ASCII


Menu	Description
ASCII	Data protocol ASCII
M.BUS	Data protocol DIM MessBus
MAST.	Instrument solicits data from subordinate system - instrument controls data transmission from subordinate system - "COMM." may be used for selection of received data (for commands see data protocol) - instrument asks 10 questions/s, if no response arrives within 2 s the display shows "...."
SLAV.	Passive display - slave is used where there is communication of other instruments or a computer in the "MAST." mode. If "COMM." is correctly received, the instruments will display the data.
UNIV.	Universal protocol - in dynamic v. dynamicých items (Start, Adr-Un, Num Sign, Data, Stop, Request) custom protocol can be set up.

Data protocol = ASCII > ASCII. Example

ASCII COMM.

\* subsequent item on the menu depends on instrument setting

## 5. SETTING LIGHT

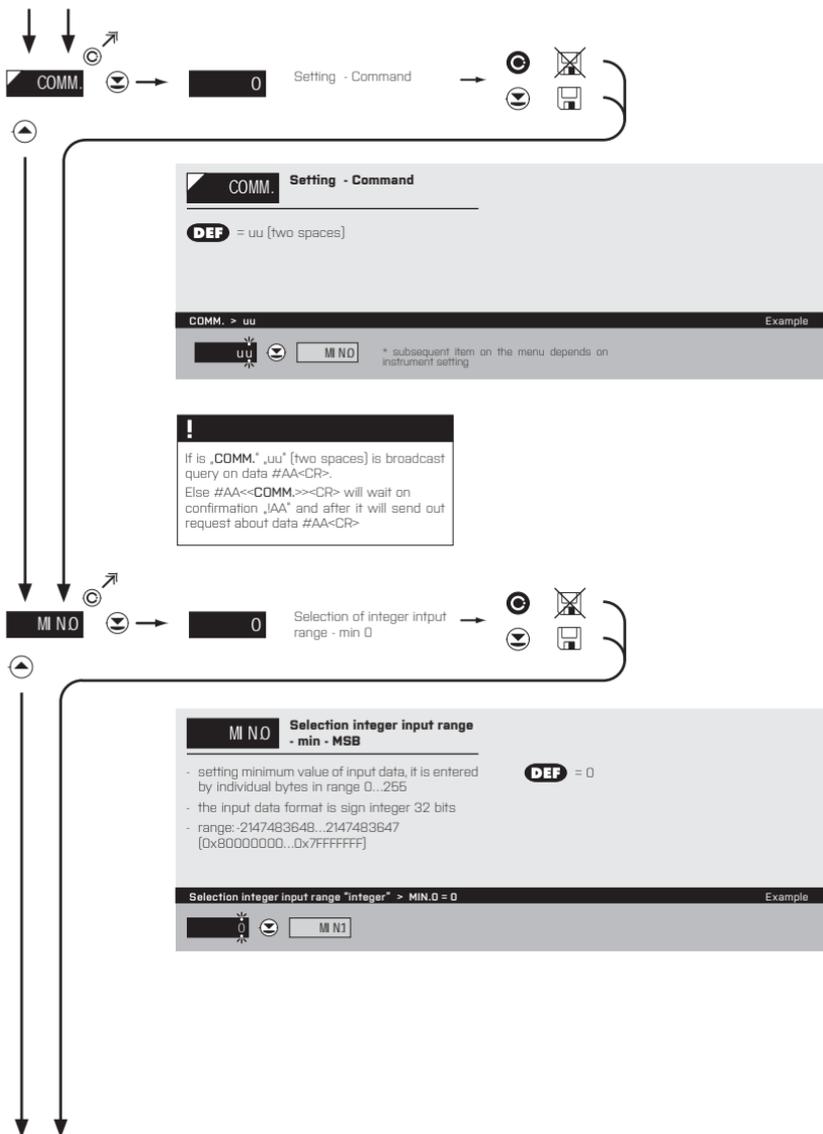



**MI N1 Selection integer input range - min "integer"**

- setting minimum value of input data, it is entered by individual bytes in range 0...255
- the input data format is sign integer 32 bits
- range: -2147483648...2147483647 [0x80000000...0x7FFFFFFF]

**DEF** = 0

---

Selection integer input range "integer" > MIN.1 = 0 Example

0 MI N2



**MI N2 Selection integer input range - min "integer"**

- setting minimum value of input data, it is entered by individual bytes in range 0...255
- the input data format is sign integer 32 bits
- range: -2147483648...2147483647 [0x80000000...0x7FFFFFFF]


**DEF** = 0

---

Selection integer input range "integer" > MIN.2 = 0 Example

0 MI N3

## 5. SETTING LIGHT

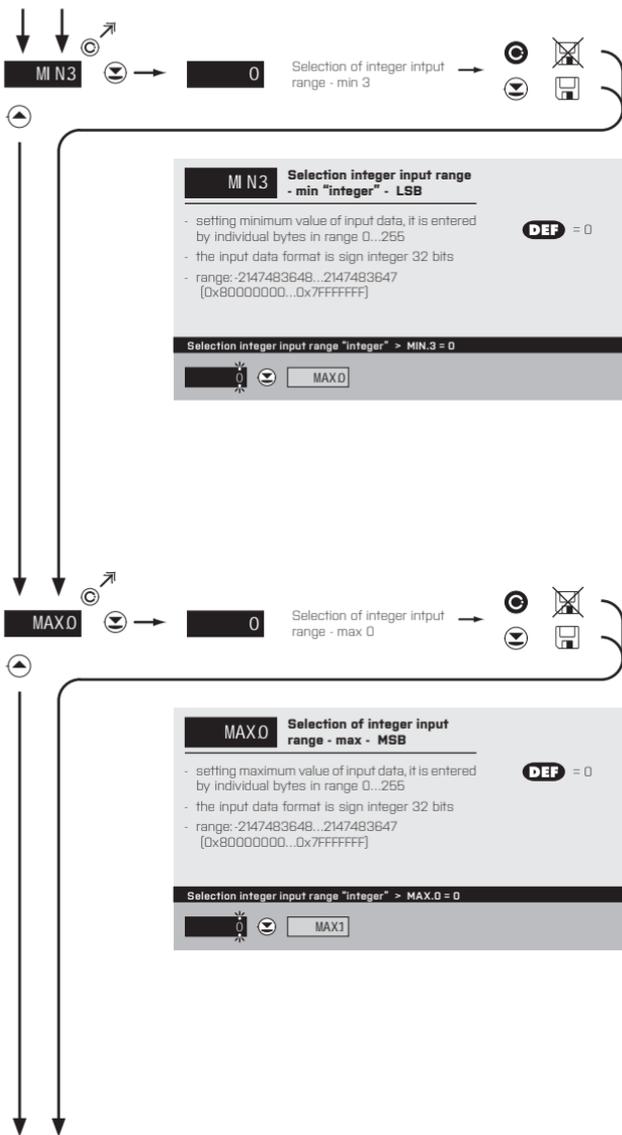



**MAX1** Selection of integer input range - max

- setting maximum value of input data, if is entered by individual bytes in range 0...255
- the input data format is sign integer 32 bits
- range: -2147483648...2147483647 [0x80000000...0x7FFFFFFF]

**DEF** = 0

Selection integer input range "integer" > MAX.1 = 0 Example

0 MAX2



**MAX2** Selection of integer input range - max


- setting maximum value of input data, it is entered by individual bytes in range 0...255
- the input data format is sign integer 32 bits
- range: -2147483648...2147483647 [0x80000000...0x7FFFFFFF]

**DEF** = 0

Selection integer input range "integer" > MAX.2 = 0 Example

0 MAX3

## 5. SETTING LIGHT

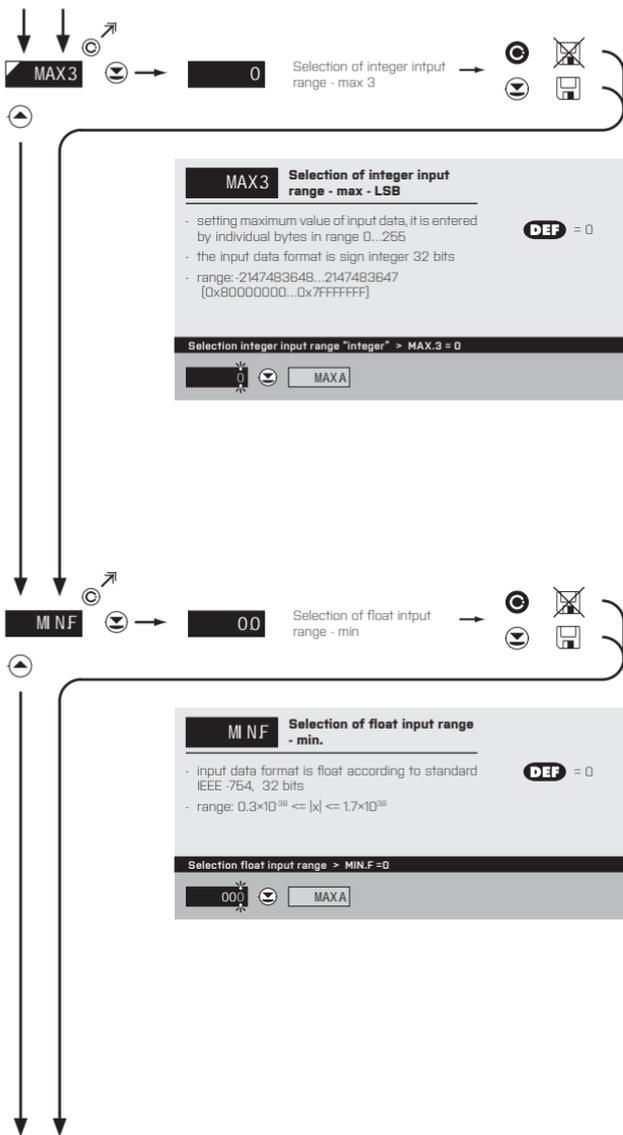



**MAX.F** Selection of float input range\* - max **DEF** = 100


- input data format is float according to standard IEEE-754, 32 bits
- range:  $0.3 \times 10^{38} \leq |x| \leq 1.7 \times 10^{38}$


Selection float input range > MAX.F=100 Example

1000  \* subsequent item on the menu depends on instrument setting

## 5. SETTING LIGHT

### SETTING UNIVERSAL PROTOCOL

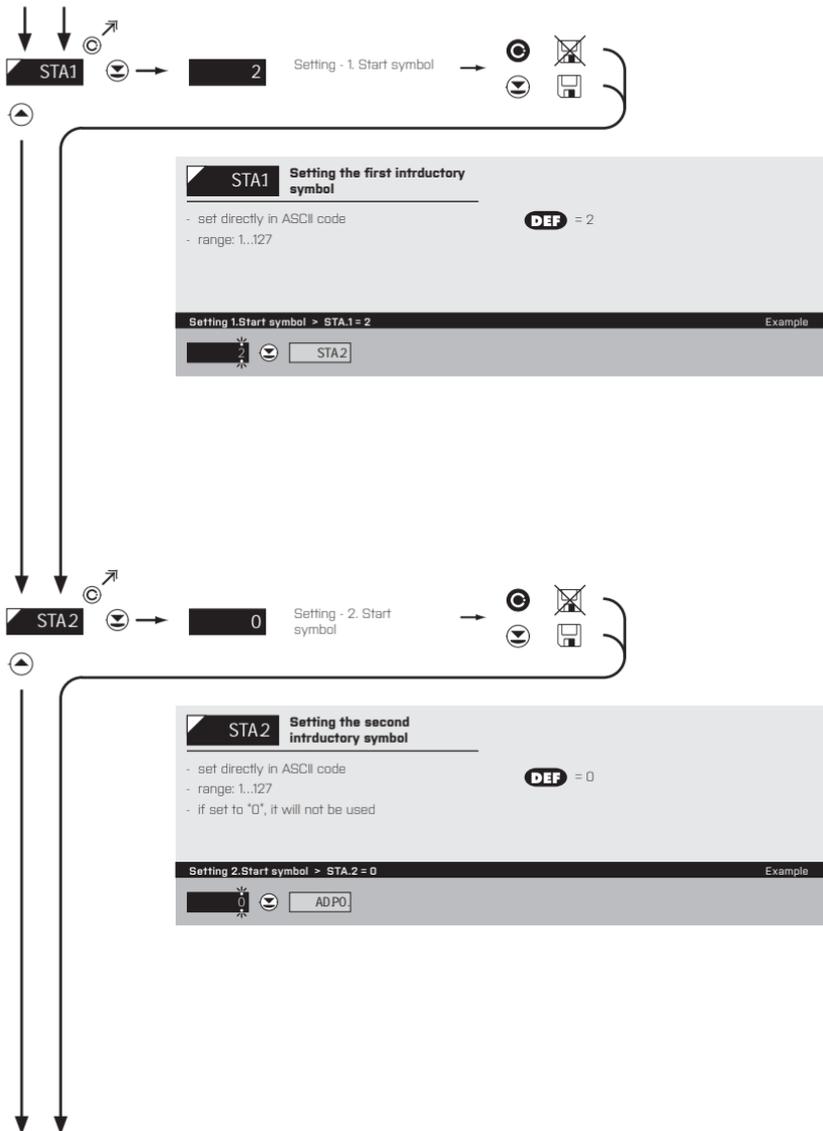

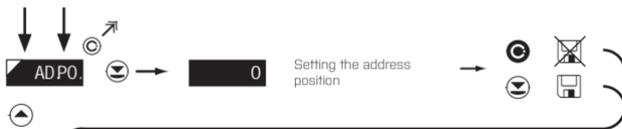


**ADPO. Setting the address position**

- Position of the address and other symbols which have to have a set value. If set to 0, the block will not be taken into account. The block can be anywhere in the message.
- range: 0...245

**DEF** = 0

Setting address position > Adr.1 = 0 Example

0 Adr1



**Adr1 First address symbol**

- set directly in ASCII code
- range: 0...127


**DEF** = 48


Setting 1 address symbol > Adr.1 = 48 Example

48 Adr2

## 5. SETTING LIGHT

SETTING UNIVERSAL PROTOCOL

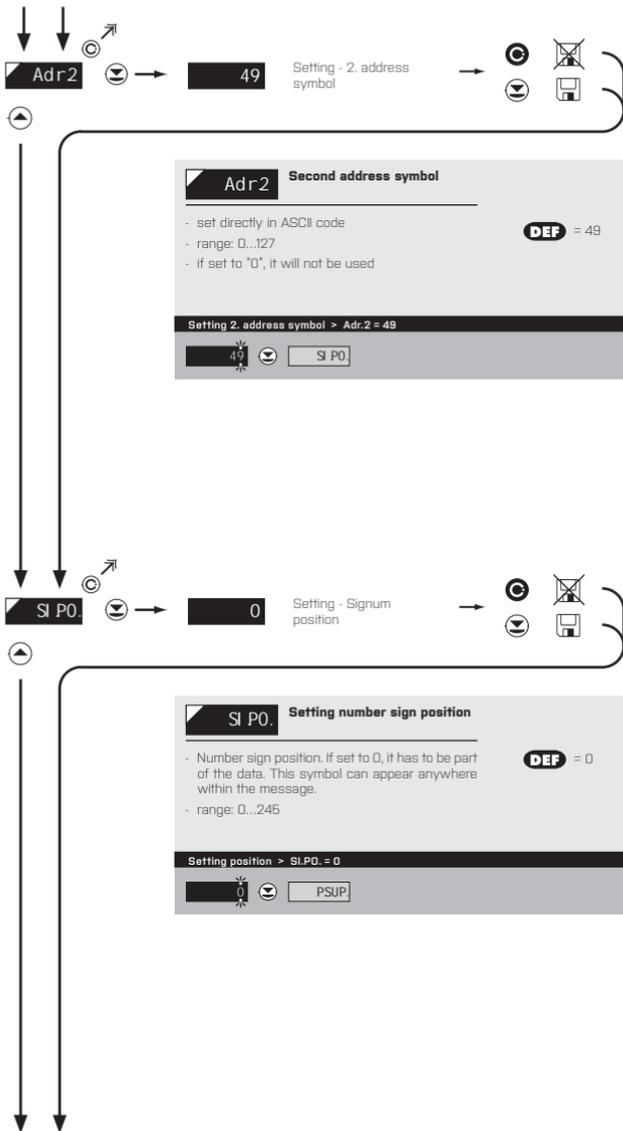

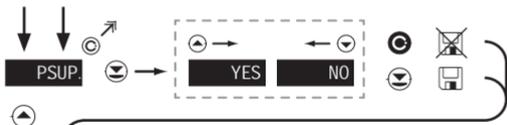


**PSUP.** „Plus“ number sign suppression

- option "YES" > number sign "plus" will be replaced by space
- option "NO" > number sign "plus" will be displayed

**DEF** = YES

Sign suppression > P.SUP. = YES Example

YES  NO



**DAPO.** Setting data position


- Data position. This block can be anywhere within the message. If ending sequence is received sooner than the set number of symbols, it is considered a successful reception.
- range: 1..245

**DEF** = 1

Setting data position > dA.PO. = 0 Example

## 5. SETTING LIGHT

SETTING UNIVERSAL PROTOCOL

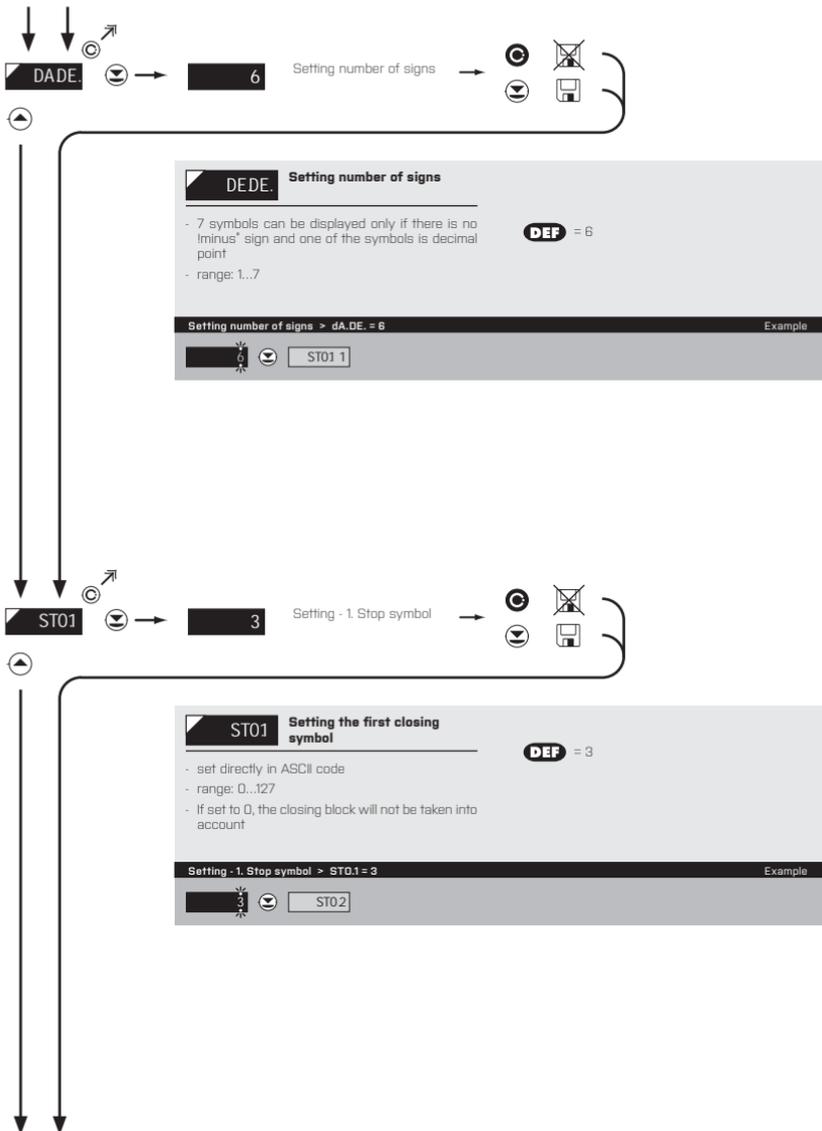



**ST02**

**Setting the second closing symbol**


- set directly in ASCII code
- range: 0..127
- If set to 0, the closing block will not be taken into account

DEF = 0

---

Setting - 2. Stop symbol > ST0.2 = 0
Example

0
↕
REQ1



**REQ1**

**First symbol of the request**

- set directly in ASCII code
- range: 0..127
- If set to "0", request is not sent

DEF = 0

---

Setting - 1. symbol > REQ.1 = 2
Example

0
↕
REQ2
•••
REQ8
↕
MO.T0

**\***

Same procedure for REQ. 2..REQ. 8

## 5. SETTING LIGHT

**MO.T.O.** → [ NO | BLAN. | FLAS. | DASH. | DOT ]

**MO.T.O.** Selecting display mode in case of communication failure

**DEF** = DASH.

Menu	Description
NO	No reaction
BLAN.	Display goes off
FLAS.	Last displayed value starts flashing
DASH.	Dash symbols displayed
DOT	Decimal point is displayed

Selecton mode > Dashes Example

[ DASH. ] [ TI.M.O. ]

**!**  
Item will not appear in "MAST." protocol

**TI.M.O.** → [ 6 ] Setting - Timeout constant

**TI.M.O.** Setting the time constant for Timeout

**DEF** = 1.0 s

- setting the time delay after which the indication of interrupted communication will appear on the display in the mode of "Mo.t.O."
- range: 0...99,9 s

Setting - Constant > \*TI.M.O. = 1 Example

[ 1.0 ] [ FORA ]

**!**  
Item will not appear in "MAST." protocol and when "MO.t.O." is disabled

**30**



**MIN.A** Selection of integer input range - min

- range of the setting is -999...9999
- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

**DEF** = 0.0

Projection for min > MIN.A = 0.0 Example

0.0 [dropdown] [MAX.A]



**MAX.A** Selection of float input range - max


- range of the setting is -999...9999
- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

**DEF** = 100.0

Projection for max > MAX.A = 100.0 Example

100.0 [dropdown] [FORA]

## 5. SETTING LIGHT

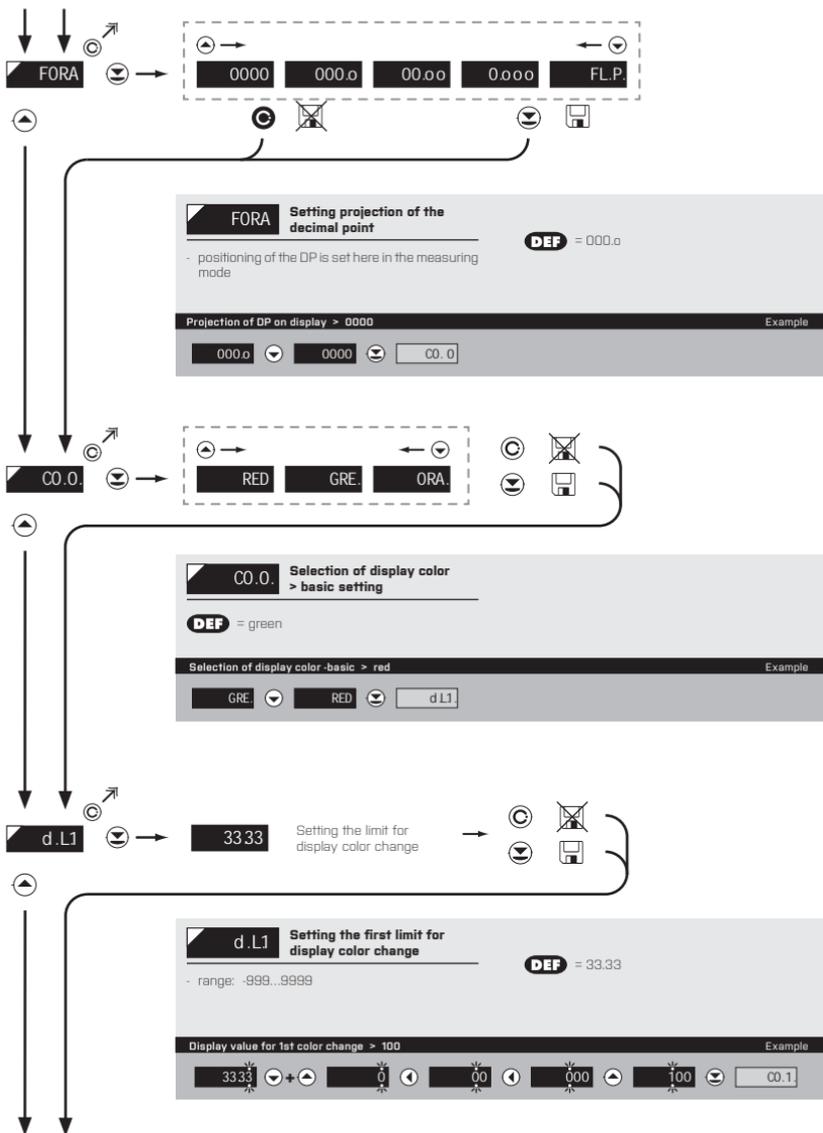



**CO.1. Selection of display color > for crossing the d. L.1**

- selection of display color is governed by the setting under item d. L.1
- the color changes if the display value exceeds the value set under d. L.1

**DEF** = orange

Selection of display color if the value is > d. L.1 > green Example

ORA [down arrow] GRE [down arrow] d L.2



**d.L.2. Setting the second limit for display color change**

- range: -999...9999

**DEF** = 66.67

Setting display for 2nd color change > 400 Example

66.67 [down arrow] [up arrow] 0 [down arrow] [up arrow] 00 [down arrow] [up arrow] 000 [down arrow] [up arrow]

200 [up arrow] 300 [up arrow] 400 [down arrow] CO.2



**CO.2. Selection of display color > for crossing the d. L.2**

- selection of display color is governed by the setting under item d. L.2
- the color changes if the display value exceeds the value set under d. L.2


**DEF** = red

Selection of display color if the value is > d. L.2 > orange Example

RED [down arrow] ORA [down arrow] MENU

\*subsequent item on the menu depends on instrument equipment



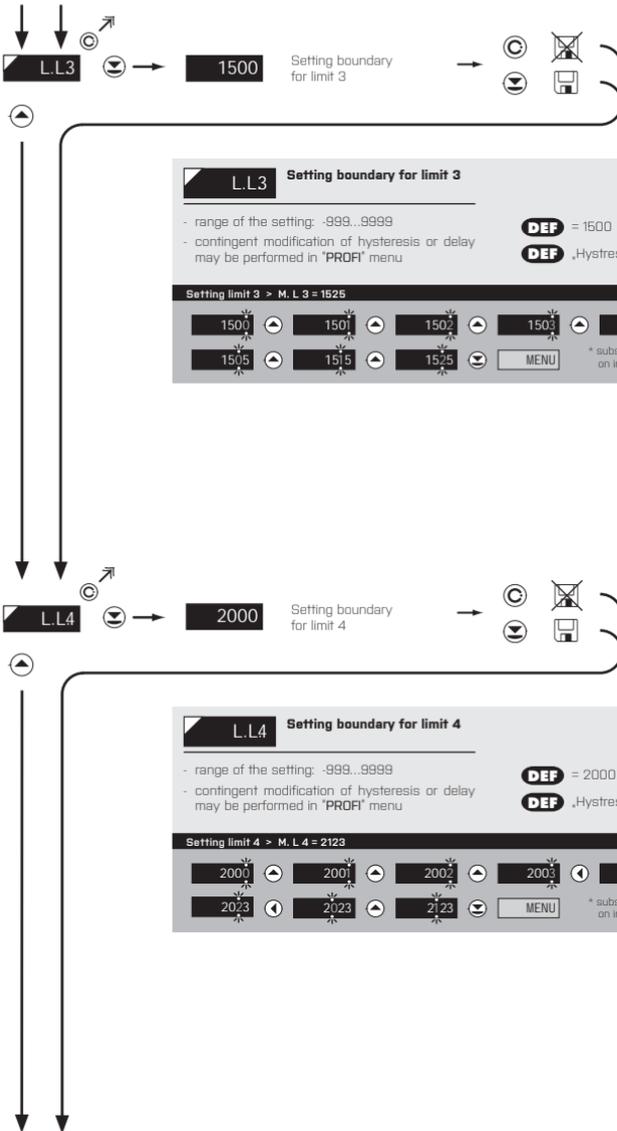

## 5. SETTING LIGHT

DISPLAYED ONLY WITH OPTIONS > ANALOG OUTPUT

**TY A.O.** Setting the type of analog output

Menu	Range	Description
0-20mA	0...20 mA	
Er4T	4...20 mA	with error message indication and broken loop indication (<3,6 mA)
4-2T	4...20 mA	with broken loop indication (<3,6 mA)
Er.4	4...20 mA	with indication of error statement (<3,6 mA)
4-20	4...20 mA	
i0.5	0...5 mA	
u0-2	0...2 V	
u0.5	0...5 V	
0-10	0...10 V	
+10	±10 V	

**DEF** = 4...20 mA

Type of analog output - 0...10 V > TY A.O. = 0-10

Example: 4-20 | i 0-5 | u0-2 | u0-5 | 0-10 | MI A.O.

**MI A.O.** Assigning the display value to the beginning of the AD range

range

- range: -999...9999


**DEF** = 0

Display value for the beginning of the AD range > MI A.O. = 0

Example: 0 | MAA0


  


**!** Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.

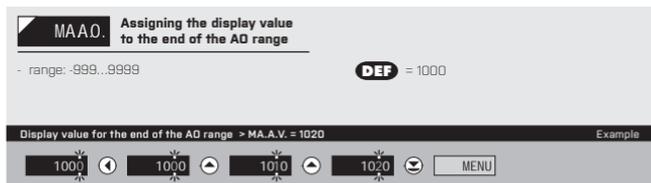

DISPLAYED ONLY WITH OPTIONS > ANALOG OUTPUT

## 5. SETTING LIGHT

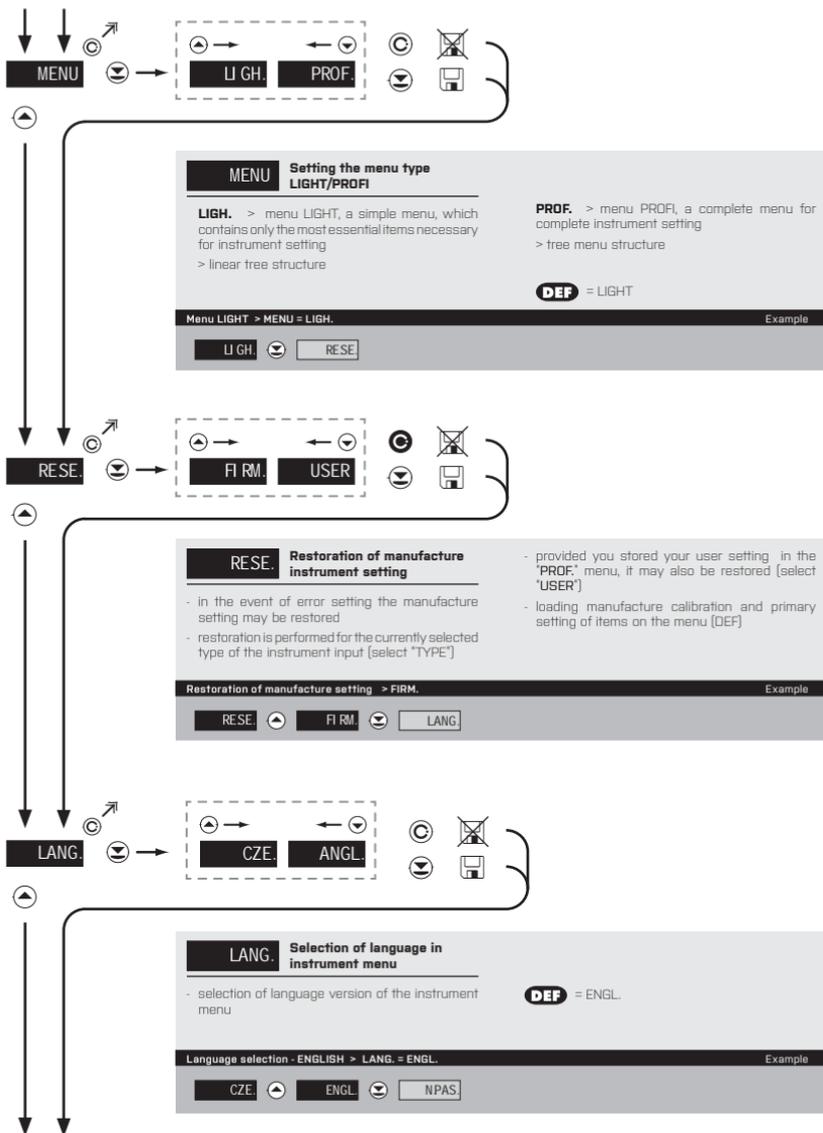

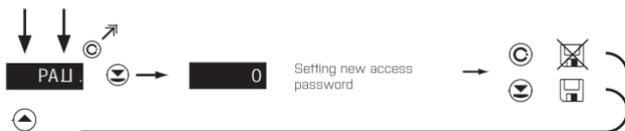

**PALI** **Setting new access password**

- access password for menu LIGHT
- range of the number code 0...9999
- upon setting the password to "0000" the access to menu LIGHT is free without prompt to enter it
- in case the password is lost, please contact the administrator of this device

**DEF** = 0

New password - 341 > N.PAS. = 341 Example

0	1	01	11	21	31
41	041	141	241	341	I DEN



**I DEN.** **Instrument SW version**

- the display shows the type of instrument indication, SW number, SW version and current input setting (Mode)
- if SW version contains a letter in first position, then it is a customer SW
- after the identification is completed the menu is automatically exited and the instrument restores the measuring mode

1428 Return to measuring mode



# SETTING **PROFI**

For expert users

Complete instrument menu

Access is password protected

Possibility to arrange items of the **USER MENU**

Tree menu structure

### 6.0 SETTING "PROFI"

#### **PROFI**

##### **Complete programming menu**

- contains complete instrument menu and is protected by optional number code
- designed for expert users
- preset from manufacture is menu **LIGHT**

#### Switching over to "PROFI" menu



- access to **PROFI** menu
- authorization for access to **PROFI** menu does not depend on setting under item SERV. > MENU
- password protected access (unless set as follows under the item SERV. > N.PAS. > PROF1 =0)




- access to menu selected under item SERV. > MENU > **LIGH./PROF.**
- password protected access (unless set as follows under the item SERV. > N.PAS. > LIGHT =0)
- for access to **LIGHT** menu passwords for **LIGHT** and **PROFI** menu may be used



## 6. SETTING PROFI


### 6.1 SETTING "PROFI" - INPUT

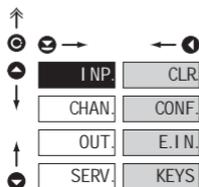

The primary instrument parameters are set in this menu

CLR	Resetting internal values
CONF.	Selection of measuring range and parameters
E.I.N.	Setting external inputs functions
KEYS	Assigning further functions to keys on the instrument

### 6.1.1 RESETTING INTERNAL VALUES

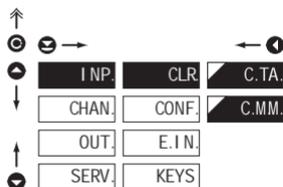

**CLR** Resetting internal values

**C.TA.** Tare resetting


**C.MM.** Resetting min/max value

- resetting memory for the storage of minimum and maximum value achieved during measurement




## 6. SETTING PROFI

Programming sch

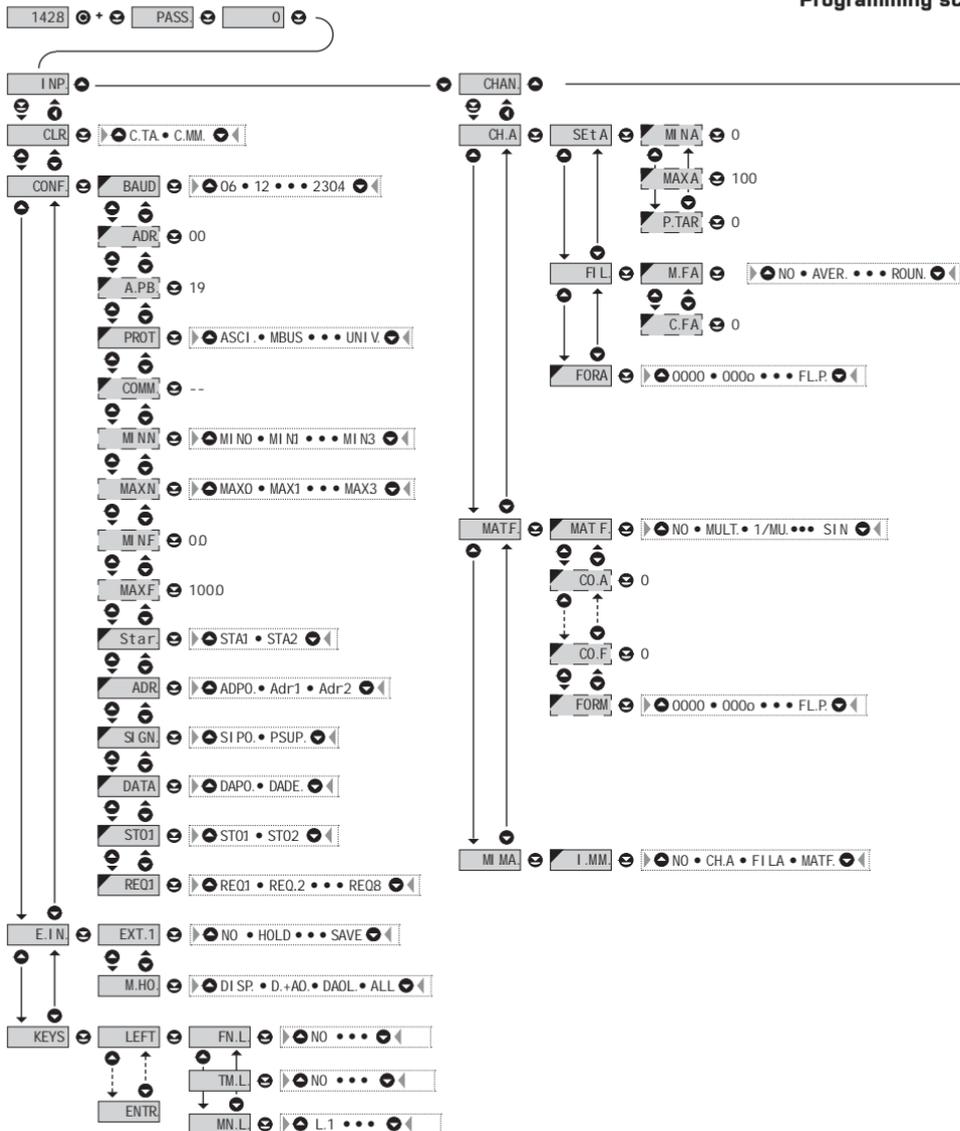

## HOME PROFI MENU

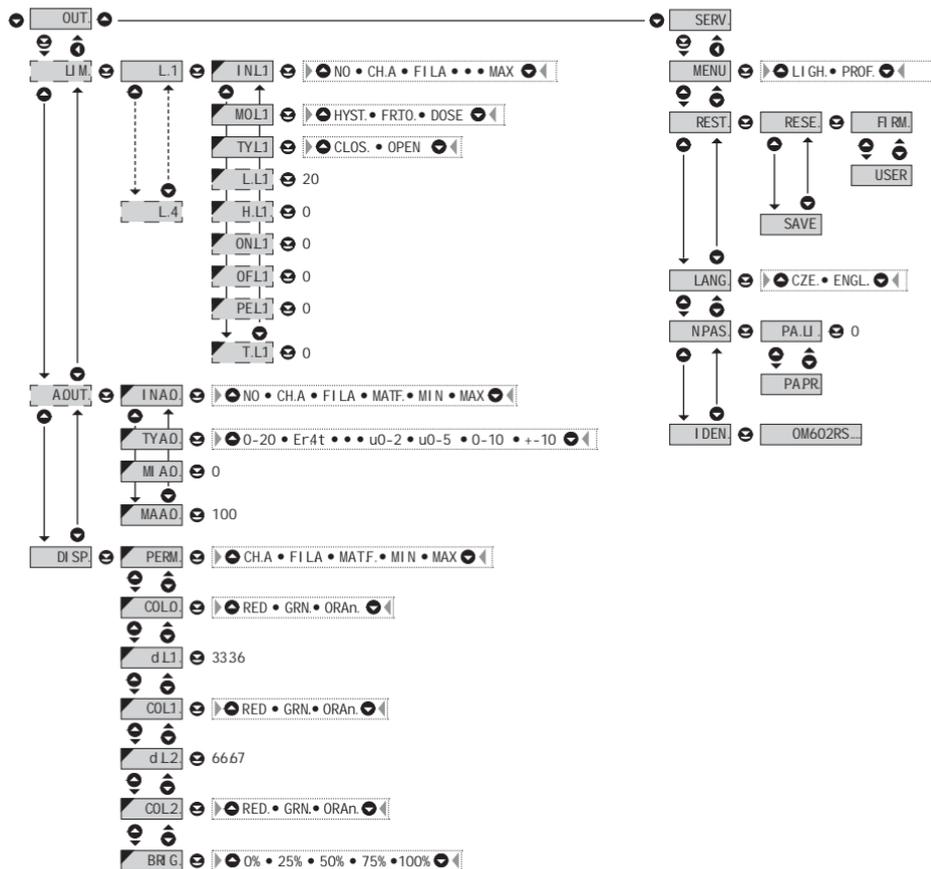

**!**  
 Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

## 6. SETTING PROFI

6.1.2c

SELECTION OF DATA PROTOCOL

INP.	CLR	BAUD	ASC	<b>DEF</b>
CHAN	CONF.	ADR	MBUS	
OUT.	E.I.N.	A.P.B.	MAST.	
SERV.	KEYS	PROT.	SLAV.	
		COMM.	UNI V.	
		MIN		
		MAXN		
		MINF		
		MAXF		
		Star		
		ADUn		
		SI GN		
		DATA		
		STOP		
		REQ		
		MOTO		
		TIMO		

### PROT. Selection of data protocol

**ASC.** Data protocol  
ASCII

**MBUS.** Data protocol  
DIN MessBus

**MAST.** Instrument solicits data  
from subordinate system

- instrument controls data transmission from subordinate system
- "COMM." may be used for selection of received data (for commands see data protocol)
- instrument asks 10 questions/s, if no response arrives within 2 s the display shows "...."

**SLAV.** Passive Display - Slave

- passive display - slave is used where there is communication of other instruments or a computer in the "MAST." mode. If "COMM." is correctly received, the instrument will display the data.

**UNI V.** Universal protocol

- in dynamic v dynamických items (Start, Adr-Un, Num Sign, Data, Stop, Request) custom protocol can be set up.




If is „COMM.“ „uu“ (two spaces) is broadcast query on data #AA<CR>.

Elee #AA<<COMM.>><CR> will wait on confirmation „AA“ and after it will send out request about data #AA<CR>

## 6.1.2d SELECTION OF INTEGER INPUT RANGE - MINIMUM

ASCII, MESSBUS

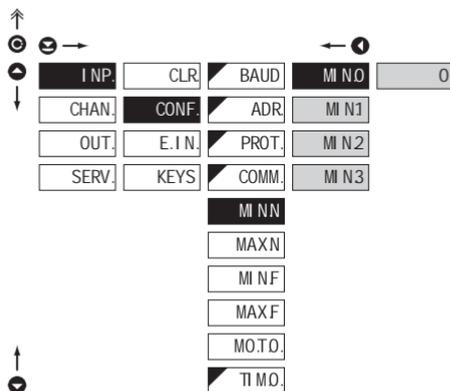**MI N N** Selection of integer input range - Min

- setting minimum value of input data, it is entered by individual bytes in range 0..255
- the input data format is sign integer 32 bits
- range: -2147483648...2147483647 [0x80000000...0x7FFFFFFF]

- **DEF** = 0

**MI N 0** Most significant byte "MSB"  
- min. 0


**MI N 1** Selection of input range  
- min. 1

**MI N 2** Selection of input range  
- min. 2

**MI N 3** Least significant byte "LSB"  
- min. 3

## 6.1.2e SELECTION OF INTEGER INPUT RANGE - MAXIMUM

ASCII, MESSBUS

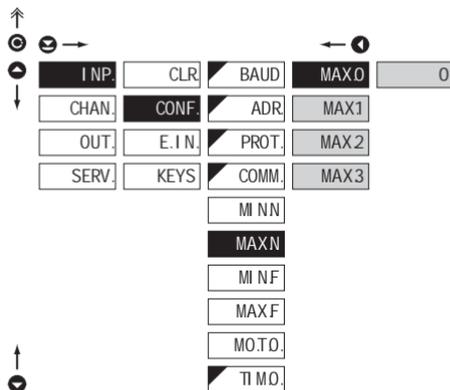**MAX N** Selection of integer input range - Max

- setting maximum value of input data, it is entered by individual bytes in range 0..255
- the input data format is sign integer 32 bits
- range: -2147483648...2147483647 [0x80000000...0x7FFFFFFF]

- **DEF** = 0

**MAX 0** Most significant byte "MSB"  
- max. 0

**MAX 1** Selection of input range  
- max. 1


**MAX 2** Selection of input range  
- max. 2

**MAX 3** Least significant byte "LSB"  
- max. 3

- **DEF** = 100

## 6. SETTING PROFI

### 6.1.2f SELECTION OF FLOAT INPUT RANGE - MINIMUM

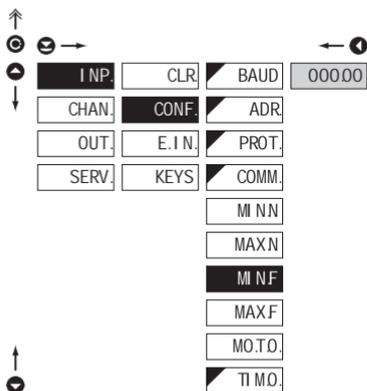


#### MI.NF Selection of float input range - min.

- setting minimum value of input data
- input data format is float according to standard IEEE -754, 32 bits
- range:  $0.3 \times 10^{38} < |x| < 1.7 \times 10^{38}$

DEF = 0

### 6.1.2g SELECTION OF FLOAT INPUT RANGE - MAXIMUM

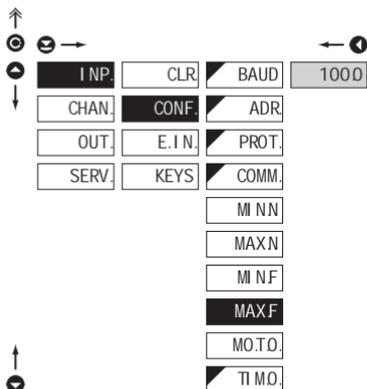


#### MAXF Selection of float input range - max

- setting maximum value of input data
- input data format is float according to standard IEEE -754, 32 bits
- range:  $0.3 \times 10^{38} < |x| < 1.7 \times 10^{38}$

DEF = 100


## 6.1.2h SELECTING DISPLAY MODE IN CASE OF COMMUNICATION FAILURE

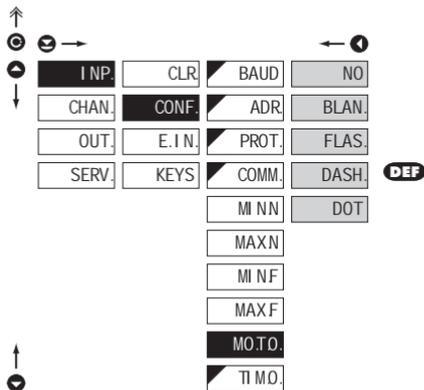**MOTO.** Selecting display mode in case of communication failure

NO	No reaction
BLAN.	Display goes off
FLAS.	Last displayed value starts flashing
DASH.	Dash symbols displayed
DOT	Decimal point is displayed

**!**  
Item will not appear in "MAST" protocol

## 6.1.2i SETTING THE TIME CONSTANT FOR TIMEOUT

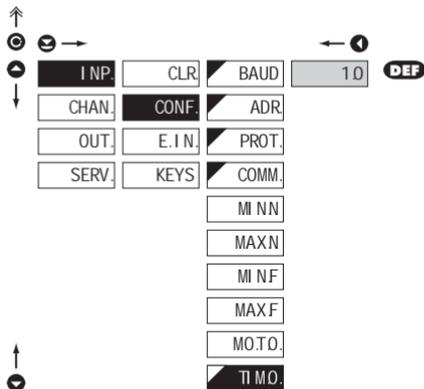**TI MO.** Setting the time constant for Timeout

- setting the time delay after which the indication of interrupted communication will appear on the display in the mode of "MO.t.O."
- range: 0...99,9 s
- **DEF** = 1,0 s


**!**  
Item will not appear in "MAST" protocol and when "MO.t.O." is disabled

## 6. SETTING PROFI

6.1.2j

SETTING INITIAL TWO-SYMBOL SEQUENCE

PROTOCOL "UNIVERSAL"

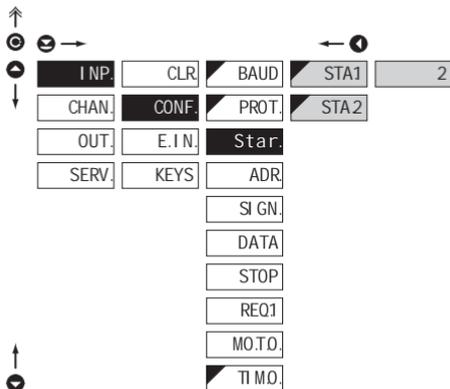

### Star. Setting initial two-symbol sequence

#### STA1 Setting the first introductory symbol

- set directly in ASCII code
- range: 1..127
- **DEF** = 2


#### STA2 Setting the second introductory symbol

- set directly in ASCII code
- range: 0..127
- if set to "0", it will not be used
- **DEF** = 0

6.1.2k

SETTING THE INSTRUMENT ADDRESS

PROTOCOL "UNIVERSAL"

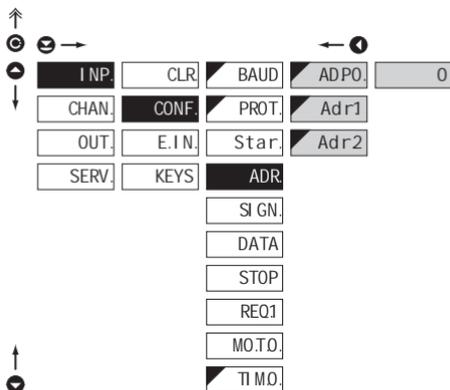

### ADR. Setting the instrument address

- either address in universal protocol or one (or two) symbols of fixed value

#### AD.P0. Setting the address position

- Position of the address and other symbols which have to have a set value. If set to 0, the block will not be taken into account. The block can be anywhere in the message.
- range: 0..245
- **DEF** = 0

#### Adr1 First address symbol

- set directly in ASCII code
- range: 0..127
- **DEF** = 48

#### Adr2 Second address symbol

- set directly in ASCII code
- range: 0..127
- if set to "0", it will not be used
- **DEF** = 49

## 6.1.2I SETTING NUMBER SIGN

PROTOCOL "UNIVERSAL"

↑	⊖	→			←	⊕
⊕	INP.	CLR	BAUD	SI PO.	0	
↓	CHAN.	CONF.	PROT.	PSUP.		
	OUT.	E.I.N.	Star.			
	SERV.	KEYS	ADR			
			SI GN.			
			DATA			
			STOP			
			REQ1			
			MOTO.			
↑			TI MO.			
⊖						

## SI GN. Nastavení obsluhy znaménka

## SI PO. Setting number sign position

- Number sign position. If set to 0, it has to be part of the data. This symbol can appear anywhere within the message.

- range: 0..245

- **DEF** = 0

## PSUP. „Plus“ number sign suppression

- option "YES" > number sign "plus" will be replaced by space

- option "NO" > number sign "plus" will be displayed

- **DEF** = YES

## 6.1.2m SETTING DATA FORMAT

PROTOCOL "UNIVERSAL"

↑	⊖	→			←	⊕
⊕	INP.	CLR	BAUD	DAPO.	0	
↓	CHAN.	CONF.	PROT.	DADE.		
	OUT.	E.I.N.	Star.			
	SERV.	KEYS	ADR			
			SI GN.			
			DATA			
			STOP			
			REQ1			
			MOTO.			
↑			TI MO.			
⊖						

## DATA Setting data format

## DAPO. Setting data position

- Data position. This block can be anywhere within the message. If ending sequence is received sooner than the set number of symbols, it is considered a successful reception.

- range: 1..245

- **DEF** = 1

## DADE. Setting number of signs

- 7 symbols can be displayed only if there is no "minus" sign and one of the symbols is decimal point


- range: 1..7

- **DEF** = 6

## 6. SETTING PROFI

### 6.1.2n SETTING OF CLOSING TWO-SYMBOL SEQUENCE

PROTOCOL "UNIVERSAL"

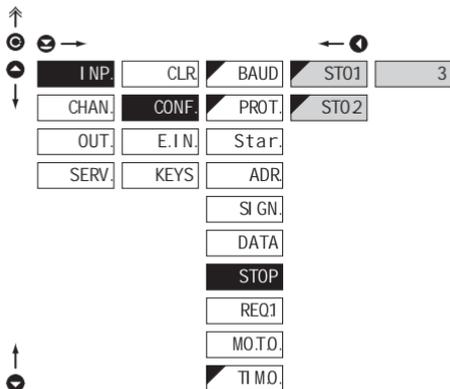

#### STOP Setting of closing two-symbol sequence

- Closing sequence. None, one or two symbols. If both symbols are "0", data will be displayed after their reception

#### STO1 Setting the first closing symbol

- set directly in ASCII code
- range: 0..127
- If set to "0", the closing block will not be taken into account

**DEF** = 3


#### STO2 Setting the second closing symbol

- set directly in ASCII code
- range: 0..127
- If set to "0", the block will not be taken into account.

**DEF** = 0

### 6.1.2o SETTING OF THE REQUEST TO RECEIVE DATA

PROTOCOL "UNIVERSAL"

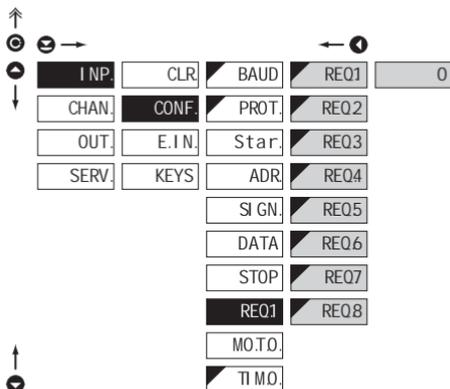

#### REQ1 Setting of the request to receive data

#### REQ1 First symbol of the request

- set directly in ASCII code
- range: 0..127
- If set to "0", request is not sent

**DEF** = 0

\*

Same procedure for REQ. 2..REQ. 8


!

How to set items "Mo.t.O." and "TIMEOU." see page 49



## 6. SETTING PROFI

### 6.1.4a OPTIONAL ACCESSORY FUNCTIONS OF THE KEYS

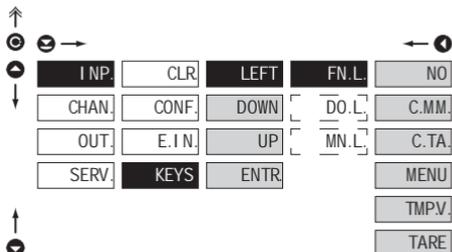

#### FN.L. Assigning further functions to instrument keys

- „FN.L.“ > executive functions
- „TM.L.“ > temporary projection of selected values
- „MN.L.“ > direct access into menu on selected item

NO	Key has no further function
C.MM.	Resetting min/max value
C.TA.	Tare resetting
MENU	Direct access into menu on selected item
TMP.V.	Temporary projection of selected values
TARE	Tare function activation



Setting is identical for LEFT, DOWN, UP and ENTER




Preset values of the control keys **DEF**

LEFT	Show Tare
UP	Show Max. value
DOWN	Show Min. value
ENTER	w/o functione

## 6.1.4b

## OPTIONAL ACCESSORY FUNCTIONS OF THE KEYS - TEMPORARY PROJECTION

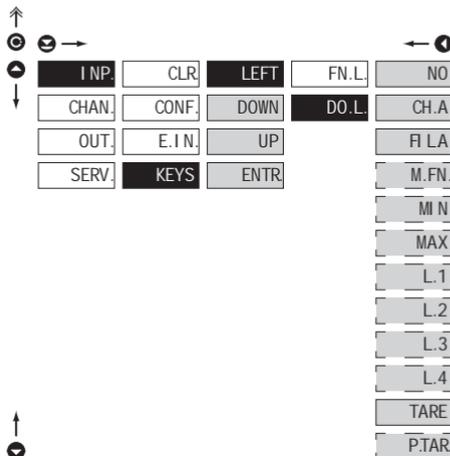**DO.L** Temporary projection of selected item

- "Temporary" projection of selected value is displayed for the time of keystroke
- "Temporary" projection may be switched to permanent by pressing **C** + "Selected key", this holds until the stroke of any key

NO	Temporary projection is off
CH.A	Temporary projection of "Channel A" value
FI.LA	Temporary projection of "Channel A" value after processing digital filters
M.FN	Temporary projection of "Mathematic functions" value
MIN	Temporary projection of "Min. value"
MAX	Temporary projection of "Max. value"
L.1	Temporary projection of "Limit 1" value
L.2	Temporary projection of "Limit 2" value
L.3	Temporary projection of "Limit 3" value
L.4	Temporary projection of "Limit 4" value
TARE	Temporary projection of "TARE" value
P.TAR	Temporary projection of "P. TARE" value




Setting is identical for LEFT, DOWN, UP and ENTER





## 6. SETTING PROFI


### 6.2 SETTING "PROFI" - CHANNEL

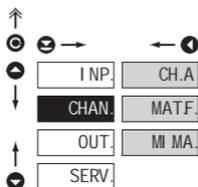

The primary instrument parameters are set in this menu

CH.A.	Setting parameters of measuring "Channel"
MAT.F.	Setting parameters of mathematic functions
MI.MA.	Selection of access and evaluation of Min/max value

### 6.2.1a DISPLAY PROJECTION

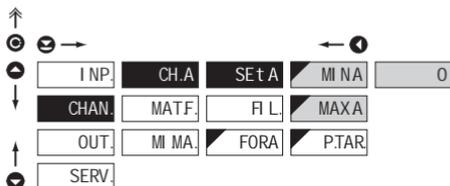

#### SET.A. Setting display projection

MI.NA. Setting display projection for minimum value of input signal

- range: -999...9999

- DEF = 0


MAX.A. Setting display projection for maximum value of input signal

- range: -999...9999

- DEF = 100

! This setting is only for ASCII protocol using commands 9N and 9F

### 6.2.1b SETTING FIXED TARE

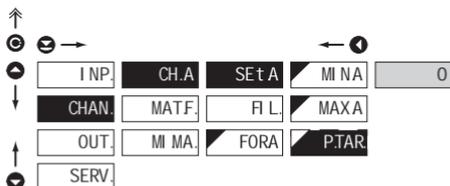

#### P.TAR. Setting "Fixed tare" value

- setting is designed for the event when it is necessary to firmly shift the beginning of the range by known size



- when setting [P.TAR. > 0] display shows "T" symbol

- range: 0...999999

- DEF = 0

! This setting is only for ASCII protocol using commands 9N and 9F

## 6.2.1c DIGITAL FILTERS

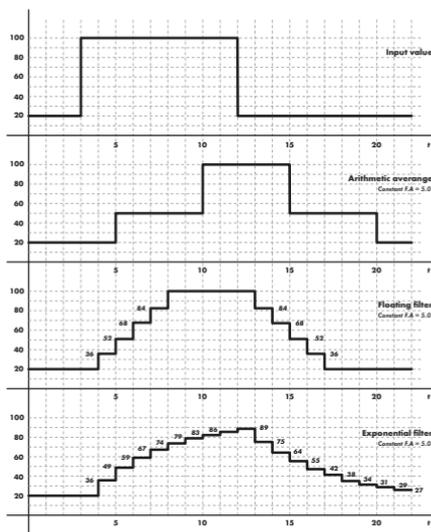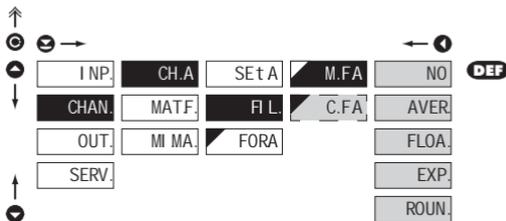**M.FA** Selection of digital filters

- at times it is useful for better user projection of data on display to modify it mathematically and properly , wherefore the following filters may be used:

**NO** Filters are off

**AVER** Measured data average

- arithmetic average from given number [C.FA] of measured values
- range: 2...100

**FLOA.** Selection of floating filter

- floating arithmetic average from given number[C.FA] of measured data and updates with each measured value
- range: 2...30

**EXP.** Selection of exponential filter

- integration filter of first prvnioh grade with time constant [C.FA] measurement
- range: 2...100

**ROUN.** Measured value rounding

- is entered by any number, which determines the projection step  
(e.g.: 'C.FA' = 2.5 > display 0, 2.5, 5,...)

**C.FA** Setting constants


- this menu item is always displayed after selection of particular type of filter

**DEF** = 2

## 6. SETTING PROFI

6.2.1d

PROJECTION FORMAT - POSITIONING OF DECIMAL POINT

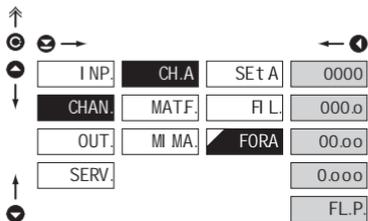

**FORA**

**Selection of decimal point**

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FL. P.“

0000

Setting DP - XXXXXX

**DEF**

000.o

Setting DP - XXXX.x

00.o.o

Setting DP - XXXX.xx

0.o.o.o


Setting DP - XXX.xxx

FL.P.

Floating DP

## 6.2.2a

## MATHEMATIC FUNCTIONS

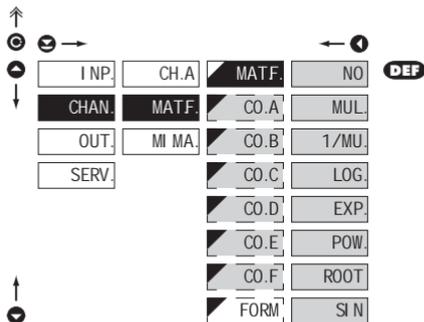

## MAT.F.

## Selection of mathematic functions

NO

Mathematic functions are off

MULT..

Multinomial

$$Ax^5 + Bx^4 + Cx^3 + Dx^2 + Ex + F$$

1/MU.]

1/x

$$\frac{A}{x^5} + \frac{B}{x^4} + \frac{C}{x^3} + \frac{D}{x^2} + \frac{E}{x} + F$$

LOG.]

Logarithm

$$A \times \ln\left(\frac{Bx + C}{Dx + E}\right) + F$$

EXP.]

Exponential

$$A \times e^{\left(\frac{Bx+C}{Dx+E}\right)} + F$$

POW.]

Power

$$A \times (Bx + C)^{(Dx+E)} + F$$

ROOT]

Root

$$A \times \sqrt{\frac{Bx + C}{Dx + E}} + F$$

SIN]

Sin x

$$A \sin^5 x + B \sin^4 x + C \sin^3 x + D \sin^2 x + E \sin x + F$$

CO.-]


Setting constants for calculation of mat.functions

- this menu is displayed only after selection of given mathematic function

## 6. SETTING PROFI

6.2.2b

MATHEMATIC FUNCTIONS - DECIMAL POINT

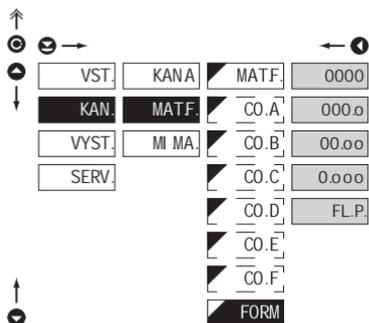

FORM

Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form ,FL.P.

000000

Setting DP - XXXXXX

00000.o

Setting DP - XXXXX.x

0000.o.o

Setting DP - XXXX.xx

000.o.o.o


Setting DP - XXX.xxx

FL.P.

Floating DP

DEF

## 6.2.3 SELECTION OF EVALUATION OF MIN/MAX VALUE

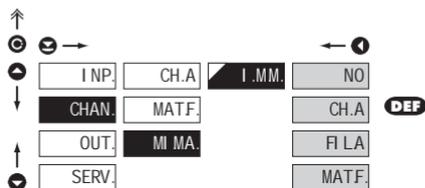
**I.MM.** Selection of evaluation of min/max value

- selection of value from which the min/max value will be calculated

NO	Evaluation of min/max value is off
CH.A	From "Channel A"
FI.LA	From "Channel A" after digital filters processing
MATF.	From "Mathematic functions"

## 6. SETTING PROFI


### 6.3 SETTING „PROFI“ - OUTPUTS

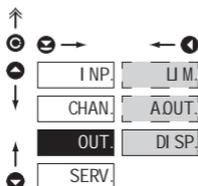

In this menu it is possible to set parameters of the instrument output signals

- LIM.** Setting type and parameters of limits
- ADUT.** Setting type and parameters of analog output
- DI SP.** Setting display projection and brightness

### 6.3.1a SELECTION OF INPUT FOR LIMITS EVALUATION

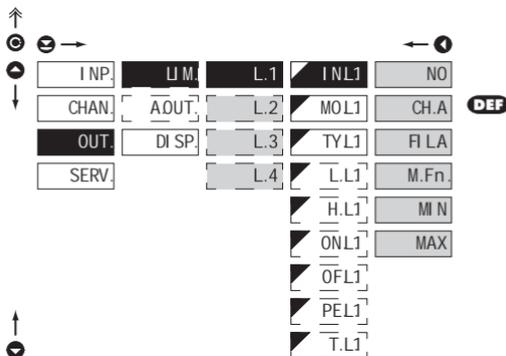


#### INL1 Selection evaluation of limits

- selection of value from which the limit will be evaluated


- NO** Limit evaluation is off
- CH.A** Limit evaluation from "Channel A"
- FI LA** Limit evaluation from "Channel A" after digital filters processing
- M.Fn.** Limit evaluation from "Mathematic functions"
- MIN** Limit evaluation from "Min. value"
- MAX** Limit evaluation from "Max. value"

Setting is identical for L.1, L.2, L.3 and L.4

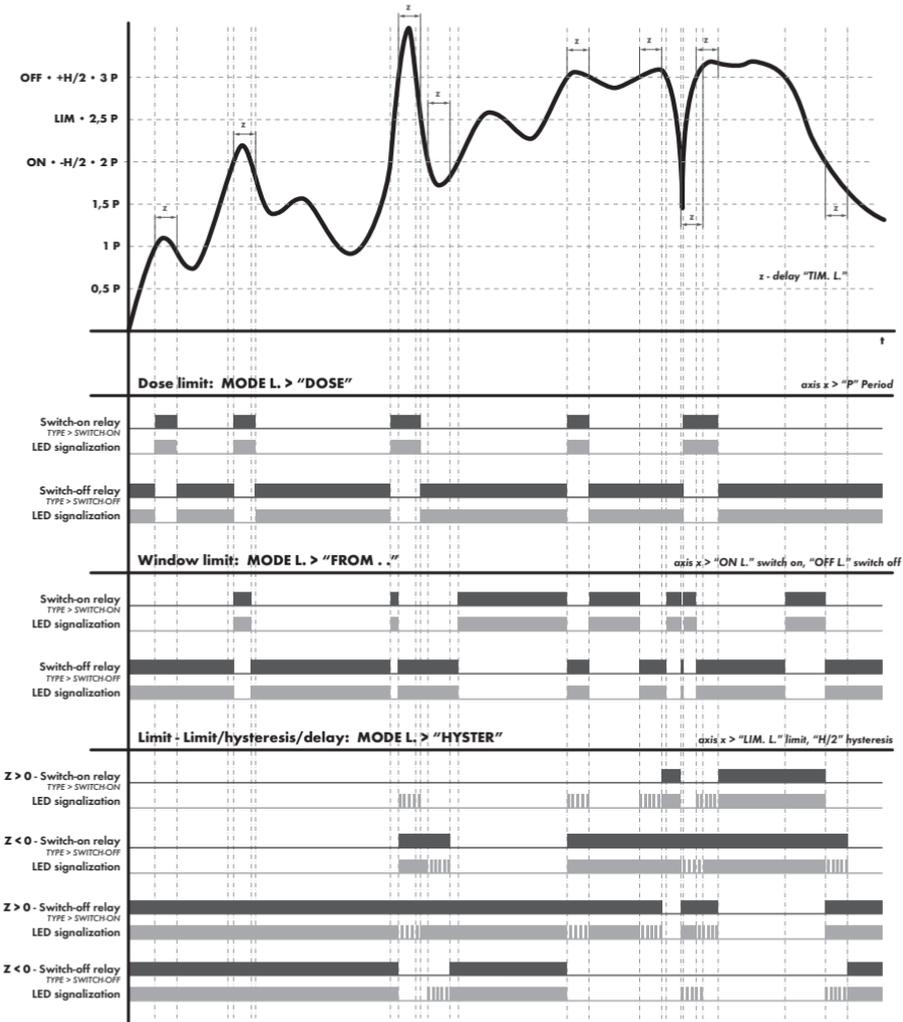

## 6. SETTING PROFI

### 6.3.1b SELECTION THE TYPE OF LIMIT

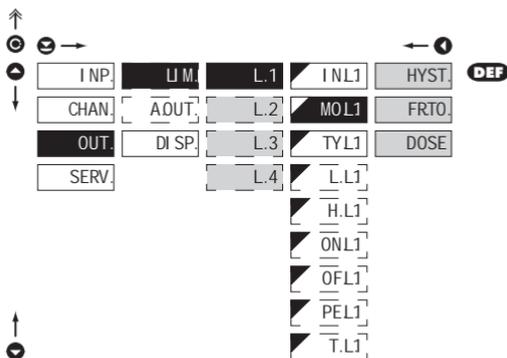

#### MO.L1 Selection the type of limit

**HYST.** Limit is in mode "Limit, hysteresis, delay"

- for this mode the parameters of "L. L." are set, at which the limit will shall react, "H. L." the hysteresis range around the limit (LJM ±1/2 HYS) and time "T. L." determining the delay of relay switch-on

**FRT0.** Frame limit


- for this mode the parameters are set for interval "ON.L." the relay switch-on and "OFL." the relay switch-off

**DOSE** Dose limit (periodic)

- for this mode the parameters are set for "PEL." determining the limit value as well as its multiples at which the output is active and "T. L." indicating the time during which is the output active

Setting is identical for L. 1, L. 2, L. 3 and L. 4

### 6.3.1c SELECTION OF TYPE OF OUTPUT

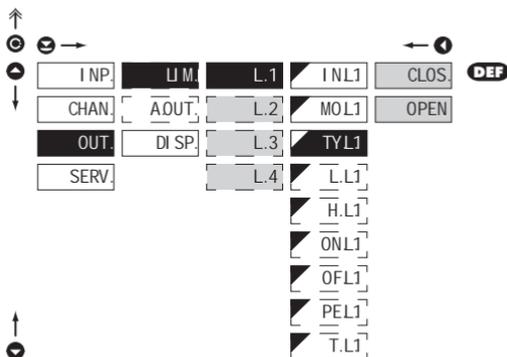

#### TYP.L1 Selection of type of output


**CLOS.** Output switches on when condition is met

**OPEN** Output switches off when condition is met

Setting is identical for L. 1, L. 2, L. 3 and L. 4

## 6.3.1d

## SETTING VALUES FOR LIMITS EVALUATION

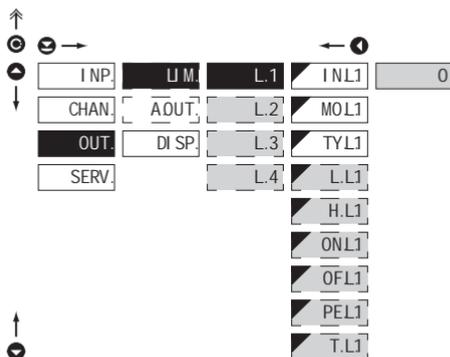**L.L1** Setting limit for switch-on

- for type "HYST."

**H.L1** Setting hysteresis

- for type "HYST."
- indicates the range around the limit (in both directions, LIM.  $\pm \sqrt{2}$  HYS.)

**ONL1** Setting the outset of the interval of limit switch-on

- for type "FR.TO"

**OFL1** Setting the end of the interval of limit switch-on

- for type "FR.TO"

**PEL1** Setting the period of limit switch-on

- for type "DOSE"

**T.L1** Setting the time switch-on of the limit


- for types "HYST." and "DOSE"
- setting within the range:  $\pm 99,9$  s
- positive time > relay switches on after crossing the limit [L.L1] and the set time [T.L1]
- negative time > relay switches off after crossing the limit [L.L1] and the set negative time [T.L1]



Setting is identical for L.1, L.2, L.3 and L.4

## 6. SETTING PROFI

### 6.3.2a SELECTION OF INPUT FOR ANALOG OUTPUT

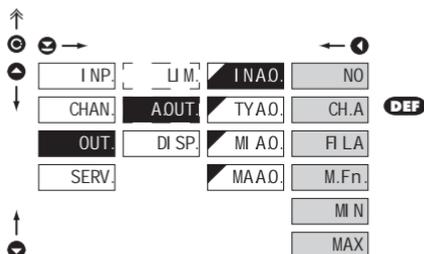


#### I N A O. Selection evaluation analog output

- selection of value from which the analog output will be evaluated

N O	AD evaluation is off
CH A	AD evaluation from "Channel A"
FI LA	AD evaluation from "Channel A" after digital filters processing
M.Fn.	AD evaluation from "Math. functions"
MI N	AD evaluation from "Min. value"
MAX	AD evaluation from "Max. value"


### 6.3.2b SELECTION OF THE TYPE OF ANALOG OUTPUT

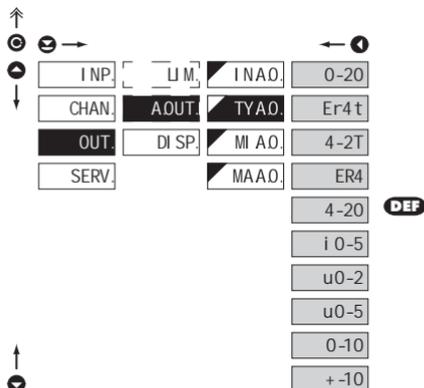

#### TY A O. Selection of the type of analog output

0-20	Type: 0...20 mA
Er4 t	Type: 4...20 mA, with broken loop detection and indication of error statement (< 3,0 mA)
4-2t	Type: 4...20 mA, with broken loop detection [< 3,0 mA]
Er4	Type: 4...20 mA, with indic. of error statement (< 3,0 mA)
4-20	Type: 4...20 mA
i 0-5	Type: 0...5 mA
u0-2	Type: 0...2 V
u0-5	Type: 0...5 V
0-10	Type: 0...10 V
+ -10	Type: ±10 V

## 6.3.2c SETTING THE ANALOG OUTPUT RANGE

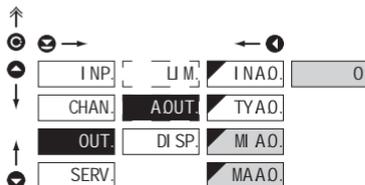**AOUT.** Setting the analog output range

- analog output is isolated and its value corresponds with displayed data. It is fully programmable, i.e. it allows to assign the AD limit points to two arbitrary points of the entire measuring range

**MI A.O.** Assigning the display value to the beginning of the

AD range


- range: -999...9999

- **DEF** = 0**MAA.O.** Assigning the display value to the end of the AD range

- range: -999...9999

- **DEF** = 100

## 6.3.3a SELECTION OF INPUT FOR DISPLAY PROJECTION

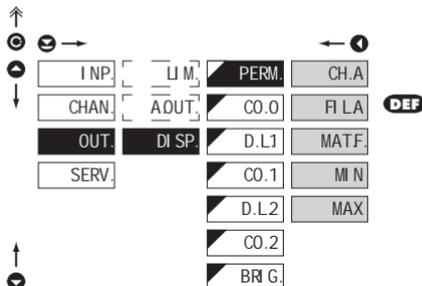**PERM.** Selection display projection

- selection of value which will be shown on the instrument display

**CH.A** Projection of values from "Channel A"

- „raw“ data will be projected on the display in the format they have been received by the instrument


**FI LA** Projection of values from "Channel A" after digital filters processing

- data which have been successfully converted to numbers will be projected

**MAT.F.** Projection of values from "Math.functions"**MI N** Projection of values from "Min.value"**MAX** Projection of values from "Max.value"

## 6. SETTING PROFI

### 6.3.5b SELECTION OF DISPLAY COLOR

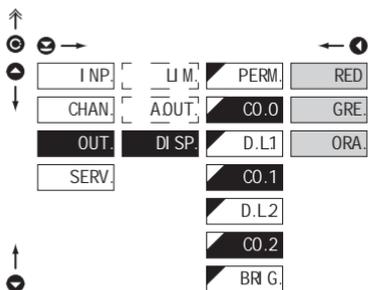


#### CO.- Selection of display color

- the color selection is governed by setting under items "D. L.1" and "D. L.2"

RED	Red color
GRE.	Green color
ORA.	Orange color

- "BAr.0." **DEF** = Green
- "BAr.1." **DEF** = Orange
- "BAr.2." **DEF** = Red

### 6.3.5c SELECTION OF DISPLAY COLOR CHANGE

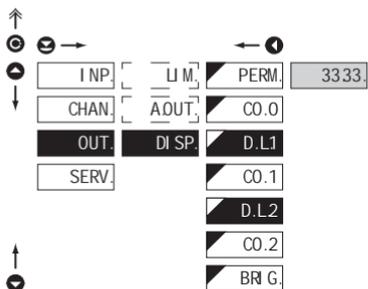


#### d.L.- Selection of display color change

- under items "D. L.1" and "D. L.2" the limit is set for the time when the display color shall change

- "d. L.1." **DEF** = 33.33
- "d. L.2." **DEF** = 66.67

## 6.3.5b

## SELECTION OF DISPLAY BRIGHTNESS

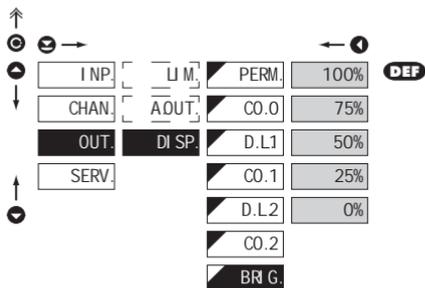**BR G.** Selection of display brightness

- by selecting display brightness we may appropriately react to light conditions in place of instrument location

0% Display is off

- after keystroke display turns on for 10 s

25% Display brightness - 25%


50% Display brightness - 50%

75% Display brightness - 75%

100% Display brightness - 100%

## 6. SETTING PROFI


### 6.4 SETTING "PROFI" - SERVICE

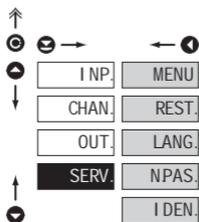

The instrument service functions are set in this menu

MENU	Selection of menu type INSTRUMENT/PROFI
REST.	Restore instrument manufacture setting and calibration
LANG.	Language version of instrument menu
NPAS.	Setting new access password
IDEN.	Instrument identification

### 6.4.1 SELECTION OF TYPE OF PROGRAMMING MENU

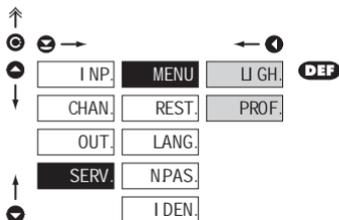

#### MENU Selection of menu type - LIGHT/PROFI

- enables setting the menu complexity according to user needs and skills

#### LI GH. Active LIGHT menu

- simple programming menu, contains only items necessary for configuration and instrument setting
- linear menu > items one after another


#### PROF. Active PROFI menu

- complete programming menu for expert users
- free menu



Change of setting is valid upon next access into menu

## 6.4.2 RESTORATION OF MANUFACTURE SETTING

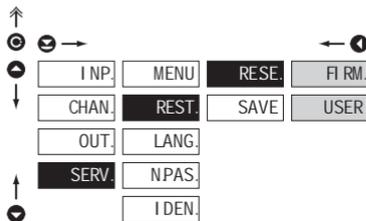**RESE.** Return to manufacture setting of the instrument**FI RM.** Return to manufacture setting of the instrument

- reading the primary setting of items in menu [DEF]


**USER** Restore user setting of the instrument

- reading user setting of the instrument, i.e. setting stored under **SERV/REST/SAVE**

**ULOZ** Save user setting of the instrument


- saving the setting allows the operator its future contingent restoration

## 6.4.3 SELECTION OF INSTRUMENT MENU LANGUAGE VERSION

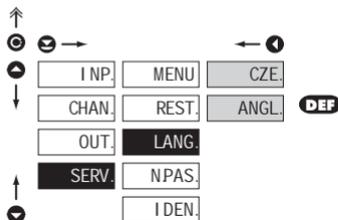**LANG.** Selection of instrument menu language version**CZE.** Instrument menu is in Czech**ANGL.** Instrument menu is in English

## 6. SETTING PROFI

### 6.4.4 SETTING NEW ACCESS PASSWORD

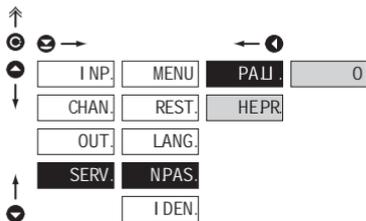


#### NPAS. Setting new password for access to LIGHT and

##### PROFI menu

- this option allows to change the numeric code, which blocks the access into LIGHT and PROFI Menu.
- numerical code range: 0...9999
- universal passwords in the event of loss: LIGHT Menu > „8177” PROFI Menu > „7915”

### 6.4.5 INSTRUMENT IDENTIFICATION

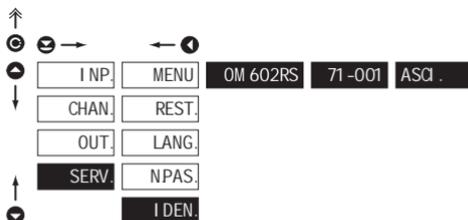

#### IDEN. Zobrazení SW verze přístroje

- display shows type identification of the instrument, SW number, SW version and current input setting [Mode]
- if the SW version reads a letter on first position, it is a customer SW

IDEN.	Blok	Description
1.	instrument	
2.	no. of SW version	
3.	type/input mode	





# SETTING USER

For user operation

Menu items are set by the user (Profi/Light) as per request

Access is not password protected

Optional menu structure either tree (PROFI) or linear (LIGHT)

## 7.0 SETTING ITEMS INTO "USER" MENU

- **USER** menu is designed for users who need to change only several items of the setting without the option to change the primary instrument setting (e.g. repeated change of limit setting)
- there are no items from manufacture permitted in **USER** menu
- on items indicated by inverse triangle  U M 1
- setting may be performed in **LIGHT** or **PROFI** menu, with the **USER** menu then overtaking the given menu structure

### Setting



**NO**

item will not be displayed in USER menu

**YES**

item will be displayed in USER menu with editing option

**SHOW**

item will be solely displayed in USER menu

## Setting sequence of items in "USER" menu


In compiling USER menu from active LIGHT menu the items (max. 10) may be assigned a sequence, in which they will be projected in the menu.

setting projection sequence



## Example of ranking the order of menu items in the "USER" menu

In this example we want to have a direct access to menu items Limit 1 and Limit 2 (example show is for the Light menu, but can equally be used in the Profi menu).

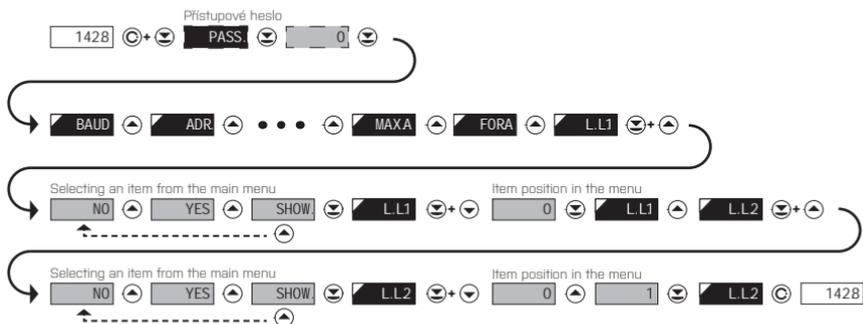

The result of this setting is that when the **⊙** button is pressed, the display will read „L. L.1“. By pressing **⊙** button you confirm your selection and then you can set the desired limit value, or by pressing the **⬆** button you can go to setting of „L. L.2“ where you can proceed identically as with Limit one.

You can exit the setting by pressing the **⊙** button by which you store the latest setting and pressing the **⊙** button will take you back to the measuring mode

## 8. DATA PROTOCOL



The instruments communicate via serial line RS232 or RS485. For communication they use the ASCII protocol. Communication runs in the following format:

ASCII (8 bit, no parity, one stop bit)

DIN MessBus (7 bit, even parity, one stop bit).

The transfer rate is adjustable in the instrument menu. The instrument address is set in the instrument menu in the range of 0 ÷ 31. The manufacture setting always presets the ASCII protocol, rate of 9600 Baud, address 00. The type of line used - RS232/RS485 - is determined by an output board automatically identified by the instrument.

The commands are described in specifications you can find at [www.orbit.merret.cz](http://www.orbit.merret.cz)

### DETAILED DESCRIPTION OF COMMUNICATION VIA SERIAL LINE

EVENT	TYPE	PROTOCOL	TRANSMITTED DATA	
Data solicitation (PC)	232	ASCII	# A A A <CR>	
		MessBus	No - data is transmitted permanently	
	485	ASCII	# A A A <CR>	
		MessBus	<SADR> <ENQ>	
Data transmission (instrument)	232	ASCII	> D (D) <CR>	
		MessBus	<STX> D (D) <ETX> <BCC>	
	485	ASCII	> D (D) <CR>	
		MessBus	<STX> D (D) <ETX> <BCC>	
Confirmation of data acceptance (PC) - OK	485	MessBus	<DLE> 1	
Confirmation of data acceptance (PC) - Bad			<NAK>	
Sending address (PC) prior command			<EADR> <ENQ>	
Confirmation of address (instrument)			<SADR> <ENQ>	
Command transmission (PC)	232	ASCII	# A A N P (D) (D) (D) (D) (D) (D) (D) (D) (D) <CR>	
		MessBus	<STX> S N P (D) <ETX> <BCC>	
	485	ASCII	# A A N P (D) <CR>	
		MessBus	<STX> S N P (D) <ETX> <BCC>	
Command confirmation (instrument)	232	ASCII	OK	! A A <CR>
			Bad	? A A <CR>
		Messbus		No - data is transmitted permanently
		485	ASCII	OK
	Bad			? A A <CR>
	MessBus		OK	<DLE> 1
			Bad	<NAK>
	Instrument identification			# A A 1 Y <CR>
HW identification			# A A 1 Z <CR>	
One-time transmission			# A A 7 X <CR>	
Repeated transmission			# A A 8 X <CR>	

**LEGEND**

SIGN	RANGE	DESCRIPTION
#	35 23 <sub>h</sub>	Command beginning
A	A 0...31	Two characters of instrument address (sent in ASCII - tens and units, e.g. '01', '99' universal)
<CR>	13 0D <sub>h</sub>	Carriage return
<SP>	32 20 <sub>h</sub>	Space
N, P		Number and command - command code
D		Data - usually characters '0'...'9', '*', '.', ':', ';', '['; [D] - dp, and ( ) may prolong data
R	30 <sub>h</sub> ...3F <sub>h</sub>	Relay and tare status
!	33 21 <sub>h</sub>	Positive confirmation of command [ok]
?	63 3F <sub>h</sub>	Negative confirmation of command [point]
>	62 3E <sub>h</sub>	Beginning of transmitted data
<STX>	2 02 <sub>h</sub>	Beginning of text
<ETX>	3 03 <sub>h</sub>	End of text
<SADR>	adresa +60 <sub>h</sub>	Prompt to send from address
<EADR>	adresa +40 <sub>h</sub>	Prompt to accept command at address
<END>	5 05 <sub>h</sub>	Terminate address
<DLE>1	16 49 10 <sub>h</sub> 31 <sub>h</sub>	Confirm correct statement
<NAK>	21 15 <sub>h</sub>	Confirm error statement
<BCC>		Check sum -XOR

**COMMANDS RS MONITORS**

- #AA**9**dddddd<CR> Reception of alpha-numerical data  
 - ddddd is data which is to be displayed  
 - maximum of 6 symbols and 2 decimal points
- #AA**9H**HHHHHHHH<CR> Selection of integer input range  
 - hexa number in sign long integer format [signed long integer]  
 - range: :2147483648...2147483647 [0x80000000...0x00000000...0x7FFFFFFF]
- #AA**9F**HHHHHHHH<CR> Selection of float input range  
 - hexa number, corresponding binary presentation of number with floating DP according to standard IEEE-754 [single/short float]  
 - significance of individual bites  
 SEEEEEEE EMMMMMMM MMMMMMMM MMMMMMMM  
 where: S ... signum [1 bit]  
 E ... exponent, incl. the signum [8 bit]  
 M ... mantissa [23 bits]  
 - rozsah:  $0.3 \times 10^{38} < x < 1.7 \times 10^{38}$

For both commands applies the rule:

If less data is sent out, they are supplemented from the right with zeros to full length. It enables contingent acceleration of communication. E.g. #009F4<CR> is identical as #009F40000000<CR>. They both send away number 2.0.

**Protocol DIN MessBus**

<EADR><END> >>> answer OK ... <DLE> 1  
 <STX>\$9 ddddd <ETX><BCC>

**RELAY, TARE**

SIGN	RELAY 1	RELAY 2	TARE	CHANGE RELAY 3/4
P	0	0	0	0
Q	1	0	0	0
R	0	1	0	0
S	1	1	0	0
T	0	0	1	0
U	1	0	1	0
V	0	1	1	0
W	1	1	1	0
p	0	0	0	1
q	1	0	0	1
r	0	1	0	1
s	1	1	0	1
t	0	0	1	1
u	1	0	1	1
v	0	1	1	1
w	1	1	1	1

Relay status is generated by command #AA6X <CR>.

The instrument immediately returns the value in the format >HH <CR>, where HH is value in HEX format and range 00<sub>h</sub>...FF<sub>h</sub>. The lowest bit stands for „Relay 1“, the highest for „Relay 8“



If channel Mathematical Functions (MF) is active, the first symbol must not be 'X'. This symbol is not supported.

## 9. ERROR STATEMENTS



CHYBA	CAUSE	ELIMINATION
D.Un.	Number is too small (large negative) to be displayed	change DP setting, channel constant setting
D.OV.	Number is too large to be displayed	change DP setting, channel constant setting
T.UN.	Number is outside the table range	increase table values, change input setting (channel constant setting)
T.OV.	Number is outside the table range	increase table values, change input setting (channel constant setting)
I.UN.	Input quantity is smaller than permitted input quantity range	change input signal value or input (range) setting
I.OV.	Input quantity is larger than permitted input quantity range	change input signal value or input (range) setting
E.HW.	A part of the instrument does not work properly	send the instrument for repair
E.EE	Data in EEPROM corrupted	perform restoration of manufacture setting, upon repeated error statement send instrument for repair
E.NA.	Data in EEPROM outside the range	perform restoration of manufacture setting, upon repeated error statement send instrument for repair
E.SM.	Memory was empty (presetting carried out)	upon repeated error statement send instrument for repair, possible failure in calibration
E.OUT.	Analogue output current loop disconnected	check wire connection



Table ASCII

0	1	2	3	4	5	6	7		9	10	11	12	13	14	15	16	17	18	19
NUL	SOH	STX	ETX	EDT	ENO	ACK	BEL	BS	HT	LF	VT	FF	CR	SO	SI	DLE	DC1	DC2	DC3
20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39
DC4	NAC	SYN	ETB	CAN	EM	SUB	ESC	FS	CS	RS	US	SP	!	."	#	\$	%	&	,
40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59
[	]	*	+	,	-	.	/	0	1	2	3	4	5	6	7	8	9	:	;
60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79
<	=	>	?	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99
P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_	`	a	b	c
100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119
d	e	f	g	h	i	j	k	l	m	n	o	p	q	r	s	t	u	v	w
120	121	122	123	124	125	126	127												
x	y	z	{		}	~	DEL												

## 11. TECHNICAL DATA



### INPUT

Protocol:	ASCII, MessBus
Data format:	8 bit + no parity + 1 stop bit (ASCII) 7 bit + even parity + 1 stop bit (MessBus) Universal protocol
Rate:	600...230 400 Baud 9 600 Baud...12 Mbaud (PROFIBUS)
RS 232:	isolated, two-way communication
RS 485:	isolated, two-way communication, addressing (in range 1...247)

### PROJECTION

Display:	9999, intensive red or green 7 segment LED, digit height 14mm
Projection:	-999...9999
Decimal point:	adjustable - in menu
Brightness:	adjustable - in menu

### INSTRUMENT ACCURACY

Linearisation:	by linear interpolation in 38 points - solely via DM Link
Digital filters:	Averaging, Floating average, Exponential filter, Rounding
Functions:	Tare - display resetting Hold - stop measuring (at contact) Lock - control key locking MM - min/max value Mathematic functions
DM Link:	company communication interface for setting, operation and update of instrument SW
Watch-dog:	reset after 400 ms
Calibration:	at 25°C and 40% of r.h.

### COMPARATOR

Type:	digital, adjustable in menu
Mode:	Hysteresis, From, Dosing
Limits:	-999...9999
Hysteresis:	0...9999
Delay:	0...99,9 s
Outputs:	2x relays with switch-on contact (Form A) [230 VAC/30 VDC, 3 A]* 2x relays with switch-off contact (Form C) [230 VAC/50 VDC, 3 A]* 2x SSR [250 VAC/ 1 A]* 2x/4x open collector [30 VDC/100 mA] 2x bistabil relays [250 VAC/250 VDC, 3 A/0,3 A]*
Relay:	1/8 HP 277 VAC, 1/10 HP 125 V, Pilot Duty D300

### ANALOG OUTPUTS

Type:	isolated, programmable with 12 bits D/A converter, analogoutput corresponds with displayed data, type and range are adjustable
Non-linearity:	0,1% of range
TC:	15 ppm/°C
Rate:	response to change of value < 1 ms
Voltage:	0...2 V/5 V/10 V/±10 V
Current:	0...5/20 mA/4...20 mA - compensation of conduct to 500 Q/12 V or 1 000 Q/24 V

### EXCITATION

Adjustbale:	5...24 VDC/max. 1,2 W, isolated
-------------	---------------------------------

### POWER SUPPLY

Option:	10...30 V AC/DC, max. 13,5 VA, isolated PF ≥ 0,4, I <sub>trip</sub> > 40 A/1 ms fuse inside (T 4000) 80...250 V AC/DC, max. 13,5 VA, isolated PF ≥ 0,4, I <sub>trip</sub> > 40 A/1 ms fuse inside (T 630)
---------	--

### MECHANIC PROPERTIES

Material:	Noryl GFN2 SE1, incombustible UL 94 V-1
Dimensions:	96 x 48 x 120 mm
Panel cut-out:	90,5 x 45 mm

### OPERATING CONDITIONS

Connection:	connector terminal board, conductor cross-section <1,5 mm <sup>2</sup> /-2,5 mm <sup>2</sup>
Stabilisation period:	within 15 minutes after switch-on
Working temp.:	-20°...60°C
Storage temp.:	-20°...85°C
Cover:	IP65 (front panel only)
Construction:	safety class I
Dielectric strength:	4 kVAC after 1 min between supply and input 4 kVAC after 1 min between supply and data/ analog output 4 kVAC after 1 min between supply and relay output 2,5 kVAC after 1 min between supply and data/ analog output
Overvoltage cat.:	EN 61010-1, A2
Insulation resist.:	for pollution degree II, measurement cat. III instrum.power supply > 670 V (PI), 300 V (DI) Input/output > 300 V (PI), 150 (DI)
EMC:	EN 61326-1

\* values apply for resistance load




## 12. INSTRUMENT DIMENSIONS AND INSTALLATION




**Front view**



**Panel cut**

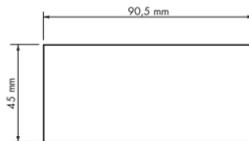



**Side view**

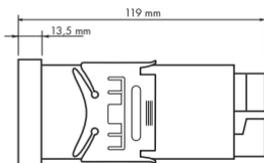

Panel thickness: 0,5...20 mm

### INSTRUMENT INSTALLATION

1. insert the instrument into the panel cut-out
2. fit both travellers on the box
3. press the travellers close to the panel

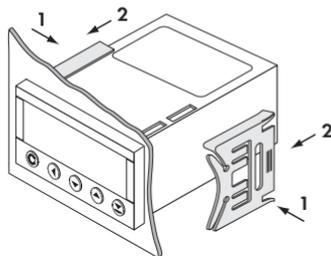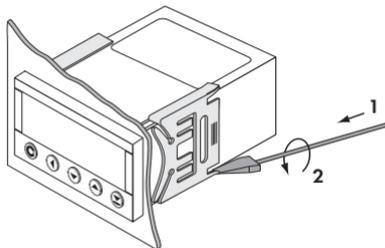


### INSTRUMENT DISASSEMBLY

1. slide a screw driver under the traveller wing
2. turn the screw driver and remove the traveller
3. take the instrument out of the panel



Product **OM 602RS**  
Type .....  
Manufacturing No. ....  
Date of sale .....

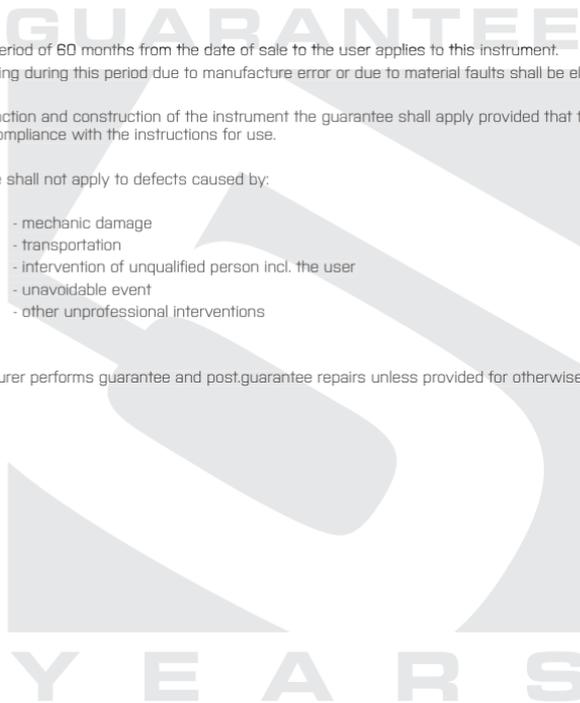

A guarantee period of 60 months from the date of sale to the user applies to this instrument.  
Defects occurring during this period due to manufacture error or due to material faults shall be eliminated free of charge.

For quality, function and construction of the instrument the guarantee shall apply provided that the instrument was connected and used in compliance with the instructions for use.

The guarantee shall not apply to defects caused by:

- mechanic damage
- transportation
- intervention of unqualified person incl. the user
- unavoidable event
- other unprofessional interventions

The manufacturer performs guarantee and post.guarantee repairs unless provided for otherwise.

Stamp, signature



**Company:** **ORBIT MERRET, spol. s r.o.**  
Klánova 81/141, 142 00 Prague 4, Czech Republic, IDNo.: 00551309

**Manufactured:** **ORBIT MERRET, spol. s r.o.**  
Vodňanská 675/30, 198 00 Prague 9, Czech Republic

declares at its explicit responsibility that the product presented hereunder meets all technical requirements, is safe for use when utilized under the terms and conditions determined by ORBIT MERRET, spol.s r.o. and that our company has taken all measures to ensure conformity of all products of the types referred-to hereunder, which are being brought out to the market, with technical documentation and requirements of the appurtenant Czech statutory orders.

**Product:** Programmable panel instrument

**Type:** **DM 602**

**Version:** AV, RS, UQC

**That has been designed and manufactured in line with requirements of:**

Statutory order no. 17/2003 Coll., on low-voltage electrical equipment (directive no. 73/23/EHS)  
Statutory order no. 616/2006 Coll., on electromagnetic compatibility (directive no. 2004/108/EHS)

**The product qualities are in conformity with harmonized standard:**

El. safety: EN 61010-1

EMC: EN 61326-1

Electronic measuring, control and laboratory devices – Requirements for EMC "Industrial use"  
EN 50131-1, chap. 14 and chap. 15, EN 50130-4, chap. 7, EN 50130-4, chap. 8, [EN 61000-4-1, ed. 2],  
EN 50130-4, chap. 9 [EN 61000-4-2], EN 50130-4, chap. 10, [EN 61000-4-3, ed. 2], EN 50130-4, chap. 11 [EN 61000-4-6],  
EN 50130-4, chap. 12, [EN 61000-4-4, ed. 2], EN 50130-4, chap. 13 [EN 61000-4-5], EN 61000-4-8, EN 61000-4-9,  
EN 61000-6-1, EN 61000-6-2, EN 65022, chap. 5 and chap. 6

The product is furnished with CE label issued in 2007.

**As documentation serve the protocols of authorized and accredited organizations:**

EMC MO CR, Testing institute of technical devices, protocol no: 80/6-332/2006 of 15/01/2007  
MO CR, Testing institute of technical devices, protocol no: 80/6-333/2006 of 15/01/2007

Place and date of issue: Prague, 19. Juli 2009

Miroslav Hackl  
Company representative

Assessment of conformity pursuant to §22 of Act no. 22/1997 Coll. and changes as amended by Act no.71/2000 Coll. and 205/2002 Coll